
FARMALL 75N, FARMALL 95N SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	6
SECTION 21 - TRANSMISSIONS	8
SECTION 23 - DRIVE LINES	11
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	12
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	13
SECTION 31 - MECHANICAL POWER TAKE-OFF	15
SECTION 33 - BRAKES	16
SECTION 35 - HYDRAULIC SYSTEMS	17
SECTION 41 - STEERING	21
SECTION 44 - AXLES AND WHEELS	23
SECTION 50 - CAB AIR CONDITIONING SYSTEM	24
SECTION 55 - ELECTRICAL SYSTEM	27
SECTION 90 - CAB	53

The following pages are the collation of the contents pages from each section and chapter of the Farmall 75N, Farmall 95N Service manual. Complete Service part # 84241668.

The sections used through out all Case IH product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the Farmall 75N, Farmall 95N Tractors.

SECTION 00 - GENERAL

BOOK 1 - 84241669


Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	2
	Important Notice	2
	Battery	2
	Shimming	2
	Rotating Shaft Seals	2
	O-Ring Seals	2
	Sealing Compounds	2
	Bearings	2
	Spring Pins	3
	Spare Parts	3
	Notes for Equipment	3
	Important Notes	3
	Moving the Tractor with the Battery Removed	3
	Safety Regulations	4
	Safety Symbols	4
	To Prevent Accidents	4
	General Guidelines	4
	Start Up	6
	Engine	6
	Electrical Systems	6
	Hydraulic Systems	6
	Wheels and Tires	6
	Removal and Installation	6
	Tractor Refuelling	7

Thank you for choosing
CasetractorManuals

Please click the following link to
download and purchase

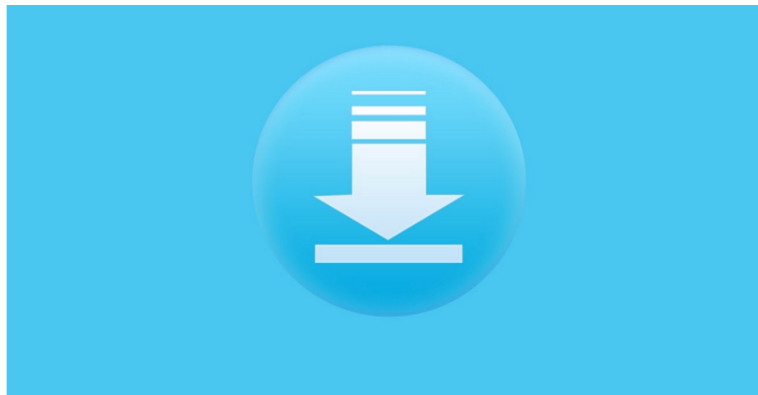

SECTION 10 - ENGINE

BOOK 1 - 84241669

Chapter 1 - Engine (Model 95N)

CONTENTS

Section	Description	Page
	Specifications	4
	Torque	12
	Special Tools	14
	Sectional Views	15
	Description and Operation	19
	Exhaust Gas Recirculation System (EGR)	19
	Troubleshooting	20
	Overhaul	24
	Engine	24
	Removal	24
	Installation	28
	Disassembly	30
	Removing the Crankshaft Front Seal	32
	Removing the Crankshaft Rear Seal	35
	Assembly	41
	Fitting the Connecting Rod-Piston Assembly	46
	Fitting the Piston Connecting Rod Assemblies In the Cylinder Liners	47
	Big End Cap Assembly	48
	Fitting the Thermostat Valve	49
	Fitting the Cylinder Head	49
	Fitting the Injectors	51
	Fitting the Rocker Arm Assembly	51
	Fitting the Timing Gear	52
	Fitting the Injection Pump	54
	Fitting the Additional Counterweights	54
	Fitting the Hydraulic Pump Drive Gear	55
	Fitting the Timing Gear Casing	56
	Fitting the Crankshaft Rear Seal	56
	Fitting the Flywheel	56
	Fitting the Oil Pump	57
	Fitting the Oil Sump	58
	Fitting the Crankshaft Front Seal	58
	Fitting the Crankshaft Front Pulley	58

SECTION 10 - ENGINE

BOOK 1 - 84241669

Chapter 1 - Engine (Model 95N) (Continued)

CONTENTS

Section	Description	Page
	Fitting the Cooling System Union	58
	Fitting the Coolant Pump	59
	Fitting the Fan-alternator Pulley	59
	Fitting the Auxiliary Member Drive Belt	61
	Fitting the Exhaust Manifold - Turbine	61
	Fitting the Injector Feed Pipes	61
	Fitting the Fuel Pump - Feed Pipes	61
	Fitting the Pipes Between the Fuel Supply and Injection Pumps, Pre-heating System and Tappet Cover	62
	Fitting the Starter Motor	62
	Checks, Measurements and Repairs	63
	Crankcase, Cylinder Liners	63
	Crankshaft	66
	Connecting Rods	68
	Bushings	68
	Checking Connecting Rods	69
	Checking Twisting	69
	Checking Bending	69
	Pistons	70
	Normal Dimensions (mm) Piston Data	70
	Measuring the Piston Diameter	71
	Piston Pins	71
	Conditions for Correct Pin-Piston Coupling	72
	Piston Rings	72
	Valves and Camshaft	74
	Dimensions (mm) of Valves and Valve Guides	74
	Decarbonizing, Checking and Grinding Valves	74
	Valve Springs	76
	Tappets	76
	Camshaft	77
	Cylinder Head	78
	Checking the Cylinder Head Mating Surface	78
	Cylinder Head Thickness	78
	Cylinder Head Hydraulic Seal Check	78

SECTION 10 - ENGINE

BOOK 1 - 84241669

Chapter 1 - Engine (Model 95N) (Continued)

CONTENTS

Section	Description	Page
	Low Oil Pressure Indicator	79
	Functional Checks	79
	Oil Filter	79
	Replacement	79
	Cooling System	80
	Radiator	80
	Flushing and Checks	80
	Coolant Thermometer	80
	Check	80
	Thermostat Valve	80
	Replacement	80
	Crankshaft - Front Seal	81
	Disassembly	81
	Assembly	82
	Crankshaft - Rear Seal	83
	Disassembly	83
	Assembly	84
	Adjusting Valve/Rocker Arm Clearance	86
	Injectors	88
	Removal	88
	Installation	90
	Bosch Injection Pump	91
	Removal	91
	Installation	93
	Timing	94
	Fuel Circuit Air Bleeding	96
	Coolant Pump	97
	Removal	97
	Installation	98
	4-Cylinder Coolant Pump and Generator Drive Belt	99
	Tension Adjustment	99

SECTION 10 - ENGINE

BOOK 1 - 84241669

Chapter 2 - Engine (Farmall 75N)

CONTENTS

Section	Description	Page
	Specifications	2
	Overhaul	4
10 001 10	Engine	4
	Removal	4
	Installation	8

SECTION 18 - CLUTCH

BOOK 1 - 84241669

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	3
	Special Tools	3
	Sectional Views	6
	Description and Operation	7
	Engaging the PTO Control Clutch	7
	Disengaging the PTO Control Clutch	8
	Adjusting the PTO Clutch Servo Control	9
	Adjusting the PTO Switch	10
	Troubleshooting	11
	Overhaul	12
18 110 10	Clutch	12
	Removal	12
	Installation	15

SECTION 18 - CLUTCH

BOOK 1 - 84241669

Chapter 1 - Clutch (Continued)

CONTENTS

Section	Description	Page
18 110 30	Dual Disk Clutch 11"/11"	16
	Disassembly	16
	Assembly	19
18 110 30	Single Disk Clutch 11" (Fitted with Power-Shuttle)	20
	Disassembly	20
	Assembly	20
	Checks, Measurements and Repairs - Dual Disk Clutch	21
	Coplanarity Adjustment of 11"/11" Dual Clutch Release	22
	Coplanarity of 11" Single Plate Clutch Release Levers	23
18 100 40	Main Clutch Adjustments	24
	PTO Clutch Control Adjustments	25

SECTION 21 - TRANSMISSIONS

BOOK 1 - 84241669

Chapter 1 - Mechanical Transmission
--

CONTENTS

Section	Description	Page
	Specifications	2
	Reverser Data	2
	Creeper Unit Data	2
	Transmission and Range Gear Data	2
	Torque	3
	Special Tools	5
	Sectional Views	9
	Description and Operation	13
	Gearbox and Shuttle	13
	Creeper Unit	13
	Troubleshooting	13
	Overhaul	15
21 118 10 - 21 118 12	Rear Transmission-Gearbox Casing	15
	Removal	15
	Installation	19
21 118 85	Gearbox Transmission Casing	21
	Disassembly	21
	Assembly	27
21 130 10	Gearbox Control Lever	31
	Removal	31
	Installation	31
21 130 11	Range Gear Control Lever	32
	Removal	32
	Installation	32
21 130 52	Shuttle Control Lever	33
	Removal	33
	Installation	33

SECTION 21 - TRANSMISSIONS

BOOK 1 - 84241669

Chapter 2 - Mechanical Transmission with Splitter
--

CONTENTS

Section	Description	Page
	Specifications	2
	Reverser Data	2
	Creeper Unit Data	2
	Transmission and Range Gear Data	2
	Splitter Main Data	3
	Torque	3
	Special Tools	3
	Sectional Views	4
	Description and Operation	8
	Gearbox and Shuttle	8
	Creeper Unit	8
	Splitter	8
	Troubleshooting	9
	Overhaul	10
21 160 31	Splitter Device and Creeper Unit Gearbox, Shafts and Bearings	10
	Removal	10
	Installation	12

SECTION 21 - TRANSMISSIONS

BOOK 1 - 84241669

Chapter 3 - Power Shuttle Transmission with Dual Command (2 Speed Power Shift) Function
--

CONTENTS

Section	Description	Page
	Specifications	2
	Reverser Data	2
	Creeper Unit Data	2
	Transmission and Range Gear Data	2
	Power Shuttle Main Data	3
	Torque	4
	Special Tools	5
	Sectional Views	9
	Description and Operation	14
	Gearbox and Shuttle	14
	Creeper Unit	14
	Power Shuttle Unit	14
	Troubleshooting	14
	Overhaul	15
21 118 85	Gearbox Transmission Casing	15
	Disassembly-Assembly	15
21 134 46	Power Shuttle Control Valve	17
	Disassembly	17
	Assembly	19
21 134 62	Accumulator	20
	Disassembly	20
	Assembly	20
21 134 70	Gearbox Control Valve Solenoid Valve - From Clutches	21
	Removal	21
	Installation	21
21 134 70	Gearbox Control Valve Solenoid Valve - From Gearbox	22
	Removal	22
	Installation	22
21 154 34 - 21 154 60	Clutch Casing	23
	Disassembly	23
	Assembly	26
	Clutch Control Pressure Test	27

SECTION 23 - DRIVE LINES

BOOK 2 - 84241670

Chapter 1 - Drive Lines

CONTENTS

Section	Description	Page
	Specifications	2
	Propeller Shaft Data	2
	Torque	3
	Special Tools	4
	Sectional Views	6
	Description and Operation	9
	4WD Drive Gear with Electro-Hydraulic Coupling	9
	Troubleshooting	10
	Overhaul	11
23 101 26	Propeller Shafts and Guard	11
	Disassembly	11
	Assembly	13
23 101 40 -		
23 202 50	Drive Gear Housing Assembly	14
	Removal	14
	Installation	15
42 23 101	Drive Gear Housing Removed	16
	Disassembly	16
	Assembly	17
23 202 52	Removal	18
	Installation	19

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84241670

Chapter 1 - Front Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	3
	Torque	5
	Special Tools	8
	Sectional Views	13
	Description and Operation	18
	Differential Lock	18
	Differential Lock Release	18
	Troubleshooting	19
	Overhaul	20
25 100 30	Front Axle Assembly	20
	Removal	20
	Installation	24
25 100 19	Front Axle Pivot Bushings	26
	Replacement	26
41 216 18	Front Axle Steering Cylinder	27
	Disassembly	27
	Assembly	28
34 25 100	Wheel Hubs and Steering Knuckle	29
	Disassembly	29
	Assembly	30
25 108 30	Front Epicyclic Final Drive	32
	Disassembly	32
25 102 15	Bevel Drive and Front Axle Differential Housing	36
	Removal	36
	Installation	37
25 102 20 -		
25 102 24	Hydraulically Controlled Differential Lock with Bevel Drive	39
	Disassembly	39
	Assembly	41

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84241670

Chapter 1 - Front Axle Mechanical Transmission (Continued)

CONTENTS

Section	Description	Page
	Bevel Drive Adjustments	43
	Determining the Thickness of the Drive Pinion Position Adjustment Ring	43
	Adjustment of the Drive Pinion Bearings	44
	Adjustment of the Crown Wheel Bearings and Checking the Backlash Between the Pinion and Crown Wheel	45
25 104 34	Front Axle Mechanical Differential Lock	47
	Disassembly	47
44 511 80	Leading Drive Wheels Toe-in Check	49
21 108 85	Front Axle Steering Sensor	50
	Replacement	50
	Assembly and Adjustment	51

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84241670

Chapter 1 - Rear Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Final Drive Data	3
	Torque	4
	Special Tools	7
	Sectional Views	11
	Description and Operation	13
	Hydraulically Controlled Rear Differential Lock	13
	Rear Transmission	14
	Troubleshooting	14
	Overhaul	16

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84241670

Chapter 1 - Rear Axle Mechanical Transmission (Continued)
--

CONTENTS

Section	Description	Page
27 106 16	Rear Transmission Gearbox	16
	Disassembly	16
	Assembly	19
27 110 10	Adjustments	22
	Adjusting the Position of Differential Lock Engagement Sleeve	22
	Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Sides of the Bevel Drive Teeth	23
	Adjustment of the Clearance Between the Sun and Planet Pinion Teeth	25
27 120 10 - 27 120 20	RH or LH Lateral Final Drive Housing Assembly	27
	Removal	27
	Installation	28
27 120 34	Drive Wheel Shaft	29
	Disassembly	29
	Assembly	30
27 120 32	Epicyclic Final Drive	31
	Removal-installation	31

SECTION 31 - MECHANICAL POWER TAKE-OFF

BOOK 2 - 84241670

Chapter 1 - Mechanical Power Take-Off
--

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	5
	Torque	6
	Sectional Views	8
	Description and Operation	10
	Description	10
	Operation	10
	PTO Controlled Directly from the Engine Clutch	10
	PTO Synchronized With Gearbox (Mechanically Controlled Models)	11
	PTO Synchronized With Gearbox (Power-Shuttle/ Dual Command (2 Speed Power Shift)) models	11
	Power Take-Off Speed Selection Lever	12
	Troubleshooting	12
	Overhaul	13
31 112 20	Mechanical PTO	13
	Disassembly	13
	Assembly	15

SECTION 33 - BRAKES

BOOK 2 - 84241670

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Torque	3
	Sectional Views	5
	Special Tools	7
	Description and Operation	8
	Service Brakes	8
	Parking Brake	8
	Troubleshooting	9
	Overhaul	11
33 202 60	Right or Left Hand Brake	11
	Removal	11
	Installation	11
33 202 46	Brake Hydraulic Pump	13
	Removal	13
	Installation	14
	Service Brakes Control Pedals Stroke Adjustment (Tractors With Cabs)	15
33 202 04	Brake Hydraulic System	17
	Air Bleeding	17
33 110 40 -		
33 110 44	Parking Brake Disks	19
	Removal	19
	Installation	20
33 110 08	Handbrake Control	20
	Stroke Adjustment	20

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84241670

Chapter 1 - Rear Mechanical Hydraulic Lift

CONTENTS

Section	Description	Page
	Specifications	2
	Rear Hydraulic Lift Data	2
	Implement Hitching Device Data	3
	Torque	4
	Special Tools	6
	Sectional Views	7
	Description and Operation	12
	Troubleshooting	16
	Overhaul	18
35 110 40	Lift Internal Controls	18
	Disassembly	18
	Assembly	21
	Lift Adjustments	22
	Adjusting Position Control	22
	Upper Stroke Limit Adjustment	24
	Adjusting Draft Control	25
35 110 08	Rod Mechanism Adjustments	28
	Position Control Rod Adjustments	28
	Adjusting Fast Raise/Lower Device	29
	Lift Arm Descent Speed Adjustments	30
	Upper Stroke Limit Adjustment Check	30
	Operations To Be Performed To Adjust The Upper Stroke Limit of the Fast Raise/Lower Device	31
35 110 42	Arm Shaft and Lift Cylinder	32
	Disassembly	32
	Assembly	34
35 114 14	Lift Control Valve	36
	Disassembly	36
	Assembly	39
35 114 30	Lift Pressure Relief Valve	40
	Removal-installation	40
35 114 32	Lift Pressure Relief Valve (Setting)	40

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84241670

Chapter 2 - Open Center System Auxiliary Control Valves
--

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	2
	Torque	2
	Sectional Views	3
	Description and Operation	5
	Operating Stages of Auxiliary Control Valve	6
	Double Acting Cylinders	6
	Single Acting Cylinders	6
	Operating Stages of Auxiliary Control Valve for the Operation of a Single/Double-Acting Cylinder with Automatic Detent Release and Float Position	7
	Lifting	7
	Lower	7
	Float Operation	8
	Overhaul	9
35 204 46	Auxiliary Control Valves	9
	Disassembly - Assembly	9
	Adjustment of the Automatic Detent Release Pressure	11

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84241670

Chapter 3 - Trailer Brake Auxiliary Control Valve
--

CONTENTS

Section	Description	Page
	Description and Operation	2
	Electro-Hydraulic Operation of Trailer Brake Valve (Italia Version)	5
	Functional Testing and Troubleshooting of Trailer Brake Valve - Italia Version	9
	Trailer Brake Release Pressure Test	9
	Test Conditions	9
	Fault Diagnosis	9
	Testing the Setting of the Trailer Brake System Pressure Control Valve Incorporated In The Trailer Brake Control Valve	10
	Fault Diagnosis	10
	Testing the Hydraulic System For Leakage	10
	Fault Diagnosis	10
	Checking That Trailer Brake Release Pressure Is Nullified When the Parking Brake Is Applied	11
	Fault Diagnosis	11
	Controlling the Switches	11
	Fault Diagnosis	11

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 2 - 84241670

Chapter 4 - Electronically Controlled Hydraulic Lift

CONTENTS

Section	Description	Page
	Specifications	3
	Implement Hitching Device Data	4
	Torque	5
	Special Tools	5
	Sectional Views	7
	Description and Operation	12
	Electronically Controlled Hydraulic Lift Operation	13
	Neutral Phase	13
	Lifting Phase	15
	Lowering Phase	17
	Overhaul	19
35 110 30	Electronically Controlled Hydraulic Lift	19
	Removal	19
	Installation	21
35 110 53	Draft Sensor Support	23
	Removal	23
	Installation	23
35 130 30	Lift Electronic Control Center	24
	Removal	24
	Installation	24
35 130 36	Lift Arm Potentiometer	25
	Removal	25
	Installation	26
35 130 56	Draft Sensor	27
	Removal	27
	Installation	28
35 134 42	Electronically Controlled Hydraulic Lift	29
	Disassembly	29
	Assembly	31
	Cylinder Safety Valve Calibration	33
35 138 20	Hydraulic Control Valve	34
	Removal	34
	Installation	34
35 138 24	Disassembly - Assembly	35
	Inspection and Re-fitting	38