
MXM120, MXM130, MXM140, MXM155, MXM175, MXM190 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	11
SECTION 21 - TRANSMISSION SYSTEMS	12
SECTION 23 - DRIVE LINES	21
SECTION 25 - FRONT AXLE	23
SECTION 27 - MECHANICAL REAR WHEEL DRIVE	26
SECTION 31 - POWER TAKE-OFF	30
SECTION 33 - BRAKES	33
SECTION 35 - HYDRAULIC SYSTEM	37
SECTION 41 - STEERING	56
SECTION 44 - FRONT AXLE AND WHEELS	57
SECTION 50 - AUXILIARY UNITS	58
SECTION 55 - ELECTRICAL SYSTEM	60
SECTION 90 - CAB	108


The following pages are the collation of the contents pages from each section and chapter of the MXM Series Repair manual. Complete Repair part # 87613647.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the MXM Series Tractors.

Thank you for choosing
CasetractorManuals

Please click the following link to
download and purchase

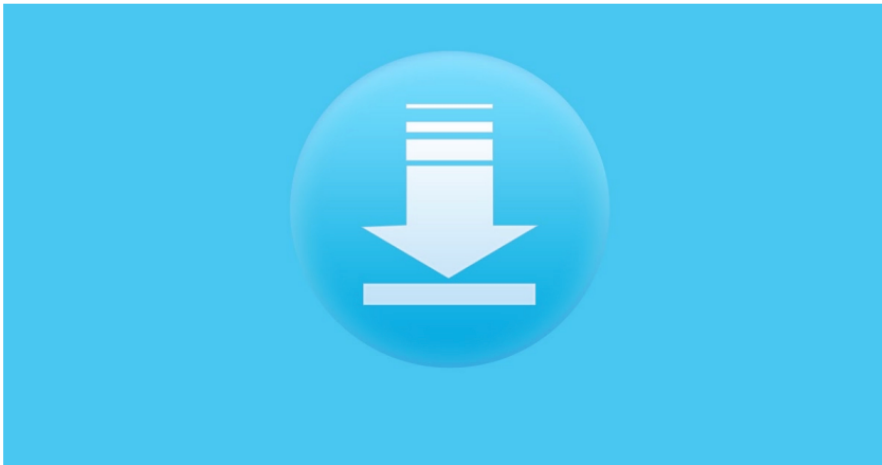

SECTION 00 - GENERAL

BOOK 1 - 87613648

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Important Notice	3
	Shimming	3
	Rotating Shaft Seals	3
	O Rings	3
	Sealers	3
	Bearings	3
	Spring Pins	3
	Precautionary Notice	4
	Equipment Notice	4
	Spare Parts Notice	4
	General Notices	4
	Health and Safety	5
	Health and Safety Precautions	5
	Precautionary Statements	14
	Safety	15
	The Tractor	15
	Driving the Tractor	15
	Operating the Tractor	15
	Operating the PTO	16
	Servicing the Tractor	16
	Diesel Fuel	17
	ROPS	17
	Ecology and the Environment	18
	Precautions	18
	Minimum Hardware Tightening Torques	19
	Federal Emissions Warranty	21
	California Emission Control Warranty Statement	22
	Lubricants and Coolants	24
	Sulphur in Fuel	24
	Biodegradable Transmission, Drive Axle, Hub, and Hydraulic System Oil	24

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 1 - Separating and Removing The Engine

CONTENTS

Section	Description	Page
	Tightening Torques	2
	Special Tools	3
	Separating and Removing the Engine	4
	Front Axle and Support	4
	Separating Front Axle and Support from Engine	4
	Installation	12
	Engine and Front Support	14
	Separating Engine and Front Support from Transmission	14
	Installation	20
	Engine	21
	Removal	21
	Installation	24

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 2 - 7.5L CNH Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Cylinder Block	6
	Cylinder Head	6
	Exhaust Valves	7
	Intake Valves	7
	Valve Springs	7
	Camshaft Lobe Lift	7
	Installed Valve Recession	7
	Valve Inserts	7
	Valve Seats	8
	Valve Timing	8
	Camshaft Idler Gear	8
	Camshaft Gear	8
	Rocker Arm Shaft	8
	Rocker Arm	8
	Tappets	8
	Camshaft	8
	Connecting Rods	9
	Piston Pin	9
	Pistons	9
	Piston Rings	9
	Crankshaft	10
	Crankshaft Drive Gear	10
	Main Bearing	10
	Crankpin Bearings	10
	Crankshaft Re-grinding	11
	Flywheel	11
	Oil Pump	11
	Oil Pressure	11
	Oil Filter Support	12
	Engine Oils and Change Periods	12

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 2 - 7.5L CNH Engine (Continued)
--

CONTENTS

Section	Description	Page
	Engine Oil Capacities	12
	Grease and Sealants	12
	Thermostat	12
	Radiator Cap	12
	Water Pump	12
	Fan Belt	12
	Cooling System Capacities	12
	Cooling Fluid	12
	Tightening Torques	13
	Description	13
	Special Tools	15
	Troubleshooting	16
	Description of Operation	20
	General	20
	Cylinder Block Assembly	20
	Cylinder Head Assembly	21
	Camshaft Assembly	21
	Crankshaft Assembly	21
	Connecting Rods	22
	Pistons	22
	Manifolds	22
	Timing Gears	22
	Lubrication System	23
	Crankcase Breather	26
	Overhaul - Cylinder Head	27
	Introduction	27
	Operations or Repairs That Can Be Performed With the Engine Still in the Vehicle	27
	Timing Check	28
	Cylinder Head, Valves, and Related Parts	31
	Cylinder Head Removal	31
	Cylinder Head Disassembly	34

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 2 - 7.5L CNH Engine (Continued)
--

CONTENTS

Section	Description	Page
	Cylinder Head Inspection and Repair	35
	Cylinder Head Assembly	39
	Engine Front Cover and Timing Gears	42
	Timing Gears Check and Removal	42
	Installation	44
	Oil Pan	47
	Removal	47
	Inspection and Repair	47
	Installation	47
	Flywheel	48
	Removal	48
	Inspection and Repair	48
	Installation	48
	Rear Cover Plate	49
	Removal	49
	Installation	49
	Oil Pump	50
	Removal	50
	Disassembly	51
	Inspection and Repair	51
	Installation	51
	Oil Pressure Relief Valve	52
	Removal	52
	Installation	52
	Camshaft	53
	Removal	53
	Inspection and Repair	53
	Camshaft Bearings	54
	Removal	54
	Installation	54
	Camshaft and Tappet Installation	54

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 2 - 7.5L CNH Engine (Continued)
--

CONTENTS

Section	Description	Page
	Pistons	55
	Removal	55
	Inspection and Repair	56
	Connecting Rod Bush Replacement	58
	Cylinder Block Overhaul	59
	Cylinder Bore	60
	Sleeving - Boring and Honing	61
	Piston and Piston Ring Replacement and Installation	62
	Crankshaft	65
	Removal	65
	Inspection and Repair	65
	Assembly	66
	Front Crankshaft OSL Seat Installation	69
	Engine Compression Test	71
	Test Procedure	71
	Test Readings	71
	Test Conclusion	71
	Cooling System - (CNH 7.5 Liter Engine)	72
	Description of Operation	72
	Troubleshooting	74
	Tightening Torques	75
	Specifications	75
	Thermostat	75
	Water Pump	75
	Drive Belt	75
	Cooling Capacities	75
	Coolant Flow	75
	Cooling Fluid	75
	Overhaul - Cooling System	76
	Radiator	76
	Removal	76

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 2 - 7.5L CNH Engine (Continued)
--

CONTENTS

Section	Description	Page
	Inspection and Repair	77
	Installation	77
	Thermostat	78
	Removal	78
	Inspection and Repair	78
	Installation	78
	Temperature Warning Sender	79
	Installation	79
	Vistronic Fan Assembly	79
	Clutch Testing	79
	Removal	79
	Installation	79
	Fan Blade Removal	80
	Assembly	80
	Fan Belt Tensioner	80
	Removal	80
	Inspection and Repair	80
	Assembly	80
	Idler Pulley (with air conditioning only)	81
	Water Pump	81
	Removal	81
	Disassembly	82
	Inspection and Repair	83
	Assembly	83
	Installation	84

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 3 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	3
	Tightening Torques	3
	Special Tools	4
	Description of Operations	5
	Single Filter Fuel System	5
	Duel Filter Fuel System	6
	Fuel Shut Off (Injection Pump)	7
	Fuel Injection Pumps	7
	Fuel Sedimenter/Primary Filter	8
	Electric Lift Pump	8
	Secondary Fuel Filter	9
	Power Boost	9
	Constant Engine Speed Control	10
	175 and 190 Tractors	10
	High RPM Switch Priority	10
	Fuel System Overhaul	11
	Bosch VE Type Fuel Injection Pump (Mechanically Governed)	11
	Removal	11
	Inspection	12
	Fuel Injection Pump Timing and Installation	12
	Bosch VP Fuel Injection Pump (Electronically Controlled)	15
	System Diagram	15
	Removal	16
	Inspection	17
	Injection Pump Timing Check	17
	Injection System Bleeding	21
	Fuel Injectors	21
	Removal	21
	Testing	22
	Disassembly	23
	Inspection and Repair	24
	Assembly	26
	Installation	26

SECTION 10 - ENGINE

BOOK 1 - 87613648

Chapter 3 - Fuel System (Continued)
--

CONTENTS

Section	Description	Page
	Electric Lift Pump	26
	Removal	26
	Testing	27
	Turbocharger	27
	Removal	27
	Disassembly	28
	Cleaning	28
	Inspection	29
	Assembly	29
	Installation	29
	Air Intake Components	31
	Description of Operation	31
	Air Cleaner	31
	Removal	31
	Disassembly (Mechanically Governed Engines)	31
	Disassembly (Electronically Governed Engines)	31
	Inspection and Repair	32
	Assembly	34
	Main Fuel Tank	34
	Removal and Installation	34
	Auxiliary Fuel Tank	36
	Removal and Installation	36
	Crankcase Ventilation	36
	Foot Throttle Cable (Mechanically Governed Engines)	36
	Replacement	36
	Adjustment	37
	Hand Throttle Cable	37
	Replacement	37
	Adjustment	37

SECTION 18 - CLUTCH

BOOK 1 - 87613648

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	13" LUK Clutch	2
	14" Valeo Clutch	2
	Tightening Torques	3
	Sectional Views	4
	13" LUK Clutch - Longitudinal Sectional View	4
	Hydraulic Clutch Control Assembly	4
	Special Tools	5
	Description and Operation	5
	General	5
	Operation	5
	Troubleshooting	6
	Overhaul	7
	Clutch	7
	Disassembly and Assembly	7
	Clutch Hydraulic Control	9
	Removal-Installation	9
	Clutch Pedal Adjustment	10
	Disassembly-Assembly	11
	Clutch Control Hydraulic Circuit Bleeding	13

SECTION 21 - TRANSMISSION SYSTEMS

BOOK 2 - 87613649

Chapter 1 - Semi-Powershift Transmission

CONTENT

Section	Description	Page
	Specifications	3
	Semi-Powershift Transmission and Range Gears	3
	Creeper Gears	5
	Tightening Torques	6
	Special Tools	7
	Sectional Views	11
	Semi-Powershift	11
	Range Control Valve	12
	Description and Operation	14
	Introduction	14
	Clutches	14
	Direction, Speed and Range Changes	15
	Gear Selection Sequence	16
	Selecting a Gear – No Clutch Pedal	16
	Selecting a Gear With Clutch Pedal	16
	Range Shifting	16
	Shuttling	16
	Failed Synchronizer Engagement	16
	Semi-Powershift Transmission Oil Flow Illustrations	17
	Semi-Powershift Transmission Oil Flow with 1st Gear Forward Engaged	17
	Semi-Powershift Transmission Oil Flow with 6th Gear Forward Engaged	18
	Power Flow 1st Gear Medium Range-Forward	19
	Power Flow 2nd Gear Medium Range-Forward	20
	Power Flow 2nd Gear Medium Range-Reverse	21
	Limp Home Feature	22
	Description	22
	Instructions	22
	Testing and Calibration	23
	Transmission Clutches, A, B, C, D and E	23
	Pressure Test	23

SECTION 21 - TRANSMISSION SYSTEMS

BOOK 2 - 87613649

Chapter 1 - Semi-Powershift Transmission (Continued)

CONTENT

Section	Description	Page
	Low, Medium, High and Reverse Synchronizer	25
	Pressure Test	25
	Clutch and Synchronizer Calibration	27
	Calibration Procedure	27
	Tractor Preparation	27
Overhaul		30
	Semi-Powershift Transmission Housing	30
	Removal	30
	Installation	33
	Transmission Overhaul	34
	Disassembly	34
	Assembly	45
	Adjustments - Internal Components	52
	Semi-Powershift Range Control Valve Assembly	56
	Removal	56
	Installation	57
	Disassembly	58
	Assembly	61
	Semi-Powershift Range Control Solenoid Valve	62
	Replacement	62
	Semi-Powershift Transmission Control Valve	64
	Removal	64
	Installation	65
	Semi-Powershift Transmission Solenoid Valve	66
	Replacement	66

SECTION 21 - TRANSMISSION SYSTEMS

BOOK 2 - 87613649

Chapter 2 - Full Powershift Transmission - 30 and 40 kph Transmission
--

CONTENT

Section	Description	Page
	Specifications	3
	Creeper Gears	5
	Tightening Torques	6
	Special Tools	11
	Description and Operation	14
	Full Powershift Transmission Components	14
	Operation	16
	Full Powershift Transmission Power Flows	18
	1st Gear Selected	20
	10th Gear Selected	20
	16th Gear Selected	21
	Reverse 5th Gear Selected	21
	Input Sensors	22
	Output Devices	24
	Control Device	24
	Driving the Tractor	25
	Auto Shift Function	27
	Auto Shifting in Road Range	27
	Auto Shifting in Field Range	28
	Changing the Gear Span	28
	Go To Mode	29
	Speed Matching	30
	Programming Reverse Gear Ratios	31
	Testing and Calibration	33
	Clutch Calibration	33
	Description	33
	Calibration Procedure	33
	Tractor Preparation	33
	Automatic Calibration Sequence Mode	36