
DX23, DX26 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - SINGLE CLUTCH	10
SECTION 21 - TRANSMISSION	11
SECTION 25 - FWD FRONT AXLE	13
SECTION 27 - DIFFERENTIAL, REAR AXLE	14
SECTION 29 - HYDROSTATIC TRANSMISSION	15
SECTION 31 - POWER TAKE-OFF (PTO)	19
SECTION 33 - BRAKES	20
SECTION 35 - HYDRAULIC SYSTEM	21
SECTION 41 - STEERING	24
SECTION 44 - WHEELS AND TIRES	25
SECTION 55 - ELECTRICAL SYSTEM	26
SECTION 90 - PLATFORM	32


The following pages are the collation of the contents pages from each section and chapter of the DX23, DX26 Repair manual. Complete Repair part # 87367148.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the DX23, DX26 Tractors.

Thank you for choosing
CasetractorManuals

Please click the following link to
download and purchase

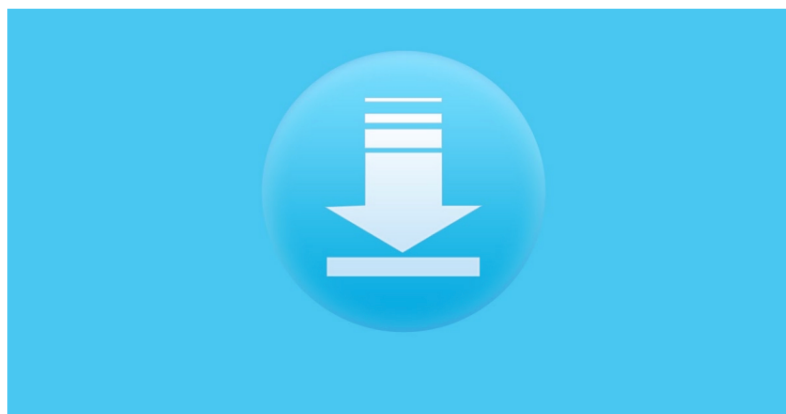

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87367149

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	2
	Precautionary Statements	3
	Safety	4
	The Tractor	4
	Servicing the Tractor	4
	Operating the Tractor	5
	Driving the Tractor	5
	Operating the PTO	6
	Diesel Fuel	6
	Safety Frame (ROPS)	6
	Safety Decals	7
	Instruction Decals	9
	Product Identification Plate	13
	Universal Symbols	14
	Specifications - DX23, DX26	15
	General Dimensions - DX23, DX26	20
	Minimum Hardware Tightening Torques	23
	Lubricants	25
	Adjustments	26

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 1 - Engine Systems

CONTENTS

Section	Description	Page
10 000	Specifications	6
	Cylinder Head	6
	Cylinder Block	7
	Piston	7
	Piston Ring	8
	Connecting Rod	8
	Crankshaft	9
	Camshaft	10
	Valves	11
	Push Rods	12
	Rocker Arms	12
	Lubrication System	12
	Cooling System	13
	Torque Specifications	14
	Metric Bolt Torque Specifications	14
	Special Tools	15
	Description and Operation – General Information	16
	Identification Chart	16
	Cylinder Head and Valve Train Components	17
	Cylinder Block Assembly	17
	Troubleshooting	19
	Overhaul – Engine	25
	Engine Preparation	25
	Disassembly	25
	Fuel Injector and Glow Plug	27
	Removal	27
	Oil Pressure Switch	27
	Removal	27
	Temperature Sending Switch and Alternator	28
	Removal	28
	Fan, Water Pump, and External Oil Tube	28
	Removal	28

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Valve Cover	28
	Removal	28
	Rocker Shaft and Push Rod	29
	Removal	29
	Cylinder Head	29
	Removal	29
	Valve Tappet	29
	Removal	29
	Fuel Shut-off Solenoid	30
	Removal	30
	Engine Timing Gear Cover	30
	Removal	30
	Timing Gears and Camshaft	32
	Removal	32
	Oil Sump	32
	Removal	32
	Oil Suction Pipe and Strainer	33
	Removal	33
	Connecting Rods, Bearing and Pistons	33
	Removal	33
	Flywheel	34
	Removal	34
	Backplate and Oil Seal	34
	Removal	34
	Crankshaft and Main Bearing	34
	Removal	34
18 110	Cylinder Head	35
	Disassembly	35
	Inspection	35
	Valve Seats	36
	Inspection	36

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Valves	37
	Inspection	37
	Valve Guides	39
	Inspection	39
	Valve Springs	39
	Inspection	39
	Rocker Arms	40
	Inspection	40
	Push Rods	40
	Inspection	40
	Cylinder Head	41
	Assembly	41
	Cylinder Block	41
	Inspection	41
10 105	Pistons, Piston Rings, and Connecting Rods	42
	Disassembly	42
	Piston	42
	Inspection	42
	Piston Rings	44
	Inspection	44
	Connecting Rods	45
	Inspection	45
	Bearing Oil Clearance Check	47
10 105	Pistons, Piston Rings, and Connecting Rod	47
	Assembly	47
10 103	Crankshaft Main Bearings	48
	Removal	48
	Inspection	48
	Crankshaft	49
	Inspection	49
	Crankshaft Journal Wear Limit and Bearing Usage	49

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Crankshaft Front Main Bearing (Bushing)	50
	Inspection	50
	Replacement	50
	Crankshaft Main Bearing	51
	Assembly	51
	Port Block	51
	Removal	51
	Installation	51
	Timing Gear	52
	Inspection	52
	Camshaft	52
	Disassembly	52
	Inspection	53
	Assembly	53
10 103	Flywheel	54
	Inspection	54
	Timing Gear Housing	54
	Front Oil Seal and Steering Pump Seal	54
	Replacement	54
	Crankshaft and Bearing Holder	55
	Assembly	55
	Rear Oil Seal and Backplate	55
	Assembly	55
	Flywheel	56
	Installation	56
	Piston and Connecting Rod	56
	Installation	56
	Oil Suction Pipe and Suction Strainer	57
	Installation	57
	Oil Sump	57
	Installation	57

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Camshaft and Camshaft Gear	57
	Assembly	57
	Idler Gear, Oil Pump and Injection Timing	58
	Installation	58
	Timing Gear Cover	58
	Installation	58
	Crankshaft Pulley	58
	Installation	58
	Fuel Injection Pump	59
	Installation	59
	Power Steering Pump	59
	Installation	59
	Head Gasket	60
	Cylinder Head	61
	Assembly	61
	Valve Clearance Adjustment	62
	Valve Cover	62
	Installation	62
	Fan, Water Pump and External Oil Tube	63
	Installation	63
	Glow Plug and Connector	63
	Installation	63
	Fuel Injector	63
	Installation	63
	Fuel Piping	64
	Installation	64
	Alternator and Temperature Sending Switch	64
	Installation	64
	Exhaust Manifold, Radiator, and Air Cleaner	65
	Installation	65

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Description of Operation – Engine Lubrication System	66
10 206	Engine Oil Filter	69
10 304	Oil Pump	69
	Removal	69
	Inspection	69
	Installation and Adjustment	70
	Engine Oil Pressure Check	71
	Oil Pressure Relief Valve	71
	Removal	71
	Installation	71
	Oil Consumption	72
10 400	Description of Operation – Cooling System	73
	Maintenance	75
	Coolant	75
	Thermostat	75
	Water Pump	75
	Cooling Fan	75
	Radiator	75
	Radiator Cap	75
	Overhaul – Cooling System	76
10 406	Radiator	76
	Removal	76
	Inspection and Repair	77
	Installation	77
10 402	Water Pump and Thermostat	78
	Removal	78
	Inspection and Repair	80
	Assembly	80
	Installation	80
	Compression Test and Tools	82

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 2 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
10 242	Description and Operation - Injection Pump	3
10 236	Pumping Elements	5
10 214	Delivery Valves	5
	Troubleshooting - General	8
	Troubleshooting - Fuel Injectors	11
	Troubleshooting - Governor	12
	Troubleshooting - Engine Breather Valve	13
	Injection Pump	14
10 214	Removal	14
	Installation	14
	Timing and Governor Adjustments	15
10 230	Installation Using Original Pump and Drive Components	15
	Install a New Pump or Drive Component	15
	Spill-timing Procedure	16
	Bleeding the Fuel System	20
	Full Screw/High Idle Adjustment	20
10 230	Description of Operation - Governor	21
	Governor	23
	Disassembly	23
	Assembly	24
	Adjustments	25
10 218	Description and Operation - Injectors	26
	Injector	27
	Removal	27
	Disassembly	28
	Assembly and Adjustment	28
	Engine Breather Valve	29
	Removal	30
	Installation	30

SECTION 18 - SINGLE CLUTCH

BOOK 1 - 87367149

Chapter 1 - Single Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Description and Operation – General Information	4
	Troubleshooting	5
	Single Clutch	3
	Free Play Adjustment	3
	Separating the Tractor Between the Engine and Clutch Housing – 9 x 3 Transmission	7
	Disassembly	7
	Removal	16
	Installation	16
	Assembly	18
	Description and Overhaul – Servicing Clutch-Related Components	26
18 110	Clutch Pilot Bearing – 9 x 3 Gear Transmission Only	26
	Removal	26
	Inspection	26
	Installation	26
	Clutch Release Bearing	27
	Removal	28
	Inspection	29
	Assembly	29
	Flywheel Dimensions	30
	Clutch Cross Shaft Bushings	30
	Removal	30
	Assembly	30
	Clutch Pedal Bushings	31
	Removal	31
	Assembly	31
	Clutch Linkage Adjustment	32

SECTION 21 - TRANSMISSION

BOOK 2 - 87367150

Chapter 1 - Transmission Systems

CONTENTS

Section	Description	Page
	Introduction	3
	Description and Operation – 9 x 3 Gear Transmission	4
	9 x 3 Gear Transmission – Power Flow	5
	Overhaul	11
	Transmission Preparation	11
	Separating the Tractor – Between the Clutch Housing and the Rear Transmission – 9 x 3 Transmission	12
	Removal	12
	Transmission Shift Cover	16
	Disassembly	18
	Assembly	22
	Input Shaft, Idler Gear and Countershaft Gear	26
	Removal	26
	Main Shaft	27
	Removal	27
	Front Wheel Drive Shaft	28
	Removal	28
	Countershaft	29
	Removal	29
	Range and Rear PTO Shift Rail and Fork	30
	Removal	30
	Pinion Shaft	31
	Removal	31
	PTO Front Countershaft	32
	Removal	32
	Mid-Mount PTO Idler Shaft	33
	Removal	33
	Mid-Range Gear Case	34
	Disassembly	34
	Inspection	34
	Assembly	35

SECTION 21 - TRANSMISSION

BOOK 2 - 87367150

Chapter 1 - Transmission Systems (Continued)

CONTENTS

Section	Description	Page
	Mid-Mount PTO Idler Shaft	36
	Assembly	36
	PTO Front Countershaft	36
	Assembly	36
	Rear PTO Countershaft	37
	Assembly	37
	Pinion Shaft	38
	Installation	38
	Shift Rail and Fork	39
	Installation	39
	Countershaft	40
	Assembly	40
	Front Wheel Drive Shaft	41
	Assembly	41
	Front Wheel Drive Shift Cover	41
	Assembly	41
	Main Shaft	42
	Assembly	42
	Input Shaft, Idler Gear and Countershaft Gear	43
	Assembly	43
	Reconnecting the Tractor – Between the Clutch Housing and the Rear Transmission – 9 x 3 Transmission	44
	Installation	44

SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87367150

Chapter 1 - FWD Front Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Front Wheel Drive	2
	Metric Bolt Torque Specifications	3
25 100	Description and Operation - Front Axle - Front Wheel Drive	4
	Troubleshooting	5
	Front Axle	5
	Overhaul	6
	Front-Wheel Drive Front Axle	6
	Removal	6
25 108	Front Axle	7
	Disassembly	7
25 102	Differential	9
	Disassembly	9
	Inspection	9
	Axle	9
	Inspection	9
	Differential	11
	Assembly	11
	Pinion	11
	Assembly	11
	Ring Gear to Pinion Backlash Check (Using Original Components)	13
	Ring Gear to Pinion Backlash Check (Using New Components)	14
	Shim Calculation - Alternate Method	15
	Pinion-To-Ring Gear Tooth Contact Adjustment	16
	Front-Wheel Drive Front Axle	17
	Installation	17
	Final Pinion and Wheel Shaft	17
	Backlash Adjustment	17

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87367150

Chapter 1 - Differential, Rear Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Metric Bolt Torque Specifications	3
	Special Tools	3
27 106	Description and Operation – General Information	4
	Differential	4
27 110	Differential Lock	5
27 126	Rear Axle and Brakes	6
	Overhaul	10
27 106	Differential	10
	Removal	10
	Drive Pinion	12
	Removal	12
	Differential	13
	Disassembly	13
	Inspection	13
	Assembly	14
	Rear Axle and Brakes	18
	Rear Axle Disassembly	18
	Inspection	18
	Rear Axle Assembly	18
27 110	Differential Lock	20
	Disassembly	20
	Assembly	21
	Ring Gear and Pinion Gear Pattern Adjustment	22

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367150

Chapter 1 - Hydrostatic Transmission

CONTENTS

Section	Description	Page
	Specifications	5
	Metric Bolt Torque Specifications	7
	Special Tools	8
29 202	Description and Operation – Hydrostatic Transmission	9
29 212	Variable Displacement Pump	11
29 212	Fixed Displacement Motor	12
	Fluid Flow	13
	Neutral Position	13
	Forward Position	14
	Reverse Position	15
	Troubleshooting	16
	Overhaul – Hydrostatic Transmission	17
	Transmission Preparation	17
	Separation between the Clutch Housing and the Extension Housing – the Extension Housing and Rear Transmission	18
29 202	Hydrostatic Unit	22
	Removal	22
	Precautions Before Disassembly	26
	Motor and Port Block	26
	Disassembly	26
	Hydrostatic Motor	28
	Disassembly	28
	Hydrostatic Motor Shaft	30
	Disassembly	30
	Charge Pump	30
	Disassembly	30
	Swash Plate	31
	Disassembly	31
	Inspection	33
	Swash Plate/Charge Pump	36
	Assembly	36

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367150

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	HST Piston Pump Cylinder Block	37
	Assembly	37
	HST Motor Cylinder Block	39
	Assembly	39
29 130	Port Block	40
	Neutral and Feed Valves	40
	Disassembly	40
	Inspection	40
	Assembly	41
	Charge Pump Relief Valve	41
	Disassembly	41
	Inspection	41
	High Pressure Relief Valve	42
	Removal	42
	Installation	42
	Hydrostatic Pump and Port Block	42
	Assembly	42
	Motor and Port Block	44
	Assembly	44
29 204	Check Valve	45
	Disassembly	45
	Inspection	45
	Assembly	45
	Installation of the Clutch Housing and the Extension Housing - the Extension Housing and Rear Transmission	46
	Pressure Tests	51
	High Pressure Relief Valve	51
	Charge Pump (Low) Pressure Relief Valve	52
	Description and Operation - Gearbox	54
29 300	Gearbox	54

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367150

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	Overhaul – Gearbox	57
	Gearbox	57
	Removal	57
	Separation between the Clutch Housing and the Extension Housing – the Extension Housing and Rear Transmission	57
	Transmission Drive Shaft and PTO Input Shaft	61
	Removal	61
	Main Bearing Holder Plate	62
	Removal	62
	Main Shaft	63
	Removal	63
	FWD Drive Shaft (FWD Model only)	63
	Removal	63
	Countershaft	65
	Removal	65
	Range and Rear PTO Shift Rail and Fork	66
	Removal	66
	Pinion Shaft	67
	Removal	67
	PTO Front Countershaft	68
	Removal	68
	Mid-Mount PTO Idler Shaft	69
	Removal	69
	Inspection	69
	Shift Rail and Fork	70
	Installation	70
	Mid-Mount PTO Idler Shaft	71
	Assembly	71
	PTO Front Countershaft	72
	Assembly	72
	Pinion Shaft	73
	Installation	73

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87367150

Chapter 1 - Hydrostatic Transmission (Continued)

CONTENTS

Section	Description	Page
	Countershaft	73
	Assembly	73
	FWD Shaft (FWD Models only)	74
	Assembly	74
	Main Shaft	75
	Assembly	75
	Input Shaft, Transmission Drive Shaft and Retaining Plate	75
	Assembly	75
	Front Wheel Drive Shift Cover	77
	Assembly	77
	Installation of the Clutch Housing and the Extension Housing - the Extension Housing and Rear Transmission	78
	Overhaul and Adjustments - Control Linkage	83
29 200	Control Linkage	83
	Initial Adjustments	84
	Control Rod	84
	Pedal Stop	84
	HST Neutralizer	85
	Removal	85
	Disassembly	86
	Inspection	87
	Assembly	88
	Installation	89
	HST Neutral Adjustment	90
	Linkage Damper	91
	Removal	91
	Pedal	92
	Removal	92
	Pedal Pivot Shaft	94
	Removal	94
	Damper, Pivot Shaft, Pedal and FWD Drive Shaft	95
	Assembly	95

SECTION 31 - POWER TAKE-OFF (PTO)

BOOK 3 - 87367151

Chapter 1 - Power Take-Off (PTO)

CONTENTS

Section	Description	Page
	Specifications	3
	Rear PTO	3
	Mid-Mount PTO	3
	Metric Bolt Torque Specifications	4
	Description and Operation – PTO System	5
31 110	9 x 3 Gear Transmission	5
31 110	Hydrostatic Transmission	6
	Overhaul – Rear PTO	7
31 114	9 x 3 Rear PTO Output Shaft	7
	Removal	7
	Inspection	7
	Assembly	8
	HST Rear PTO Output Shaft	9
	Removal	9
	Inspection	9
	Assembly	10
	Description and Operation – Mid-Mount PTO	11
	Mid-Mount Power Take-Off	11
	Overhaul – Mid-Mount PTO	13
31 120	9 x 3 Optional Mid-Mount PTO	14
	Gearbox and Countershaft	14
	Removal	14
	Output Shaft	14
	Removal	14
	Inspection	15
	Assembly	15
	Gearbox and Countershaft	15
	Assembly	15
	Hydrostatic Transmission, Standard Mid-Mount PTO	17
	Gearbox and Countershaft	17
	Removal	17

SECTION 31 - POWER TAKE-OFF (PTO)

BOOK 3 - 87367151

Chapter 1 - Power Take-Off (PTO) (Continued)

CONTENTS

Section	Description	Page
	Output Shaft	17
	Removal	17
	Inspection	18
	Assembly	18
	Gearbox and Countershaft	18
	Assembly	18

SECTION 33 - BRAKES

BOOK 3 - 87367151

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Overhaul	3
33 120	Brakes and Final Pinion	3
	Removal	3
	Inspection	4
	Assembly	4
	Brake Adjustment	5