
JX1060C, JX1070C, JX1075C, JX1085C, JX1095C REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	10
SECTION 21 - TRANSMISSIONS	12
SECTION 23 - MFD TRANSFER BOX	15
SECTION 25 - FRONT AXLE (MFD)	15
SECTION 27 - REAR MECHANICAL DRIVE	16
SECTION 31 - MECHANICAL POWER TAKE-OFF	16
SECTION 33 - BRAKING SYSTEM	17
SECTION 35 - HYDRAULIC SYSTEM	18
SECTION 41 - STEERING	20
SECTION 44 - AXLES AND WHEELS	21
SECTION 50 - CAB AIR CONDITIONING SYSTEM	21
SECTION 55 - ELECTRICAL SYSTEM	22
SECTION 90 - PLATFORM, CAB, BODYWORK	28

The following pages are the collation of the contents pages from each section and chapter of the JXC Series Repair manual. Complete Repair part # 87393635.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the JXC Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87393636

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Lubricants and Fluids	25

SECTION 10 - ENGINE

BOOK 1 - 87393636


Chapter 1 - Engine (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	10
	Tightening Torques	12
	Sectional Views	13
	Engine Troubleshooting	15
	Overhaul	19
10 001 10	Engine	19
	Removal	19
	Installation	20
10 001 30	Compression Test	21
10 001 54	Disassembly	22
	Assembly	32

Thank you for choosing
CasetractorManuals

Please click the following link to
download and purchase

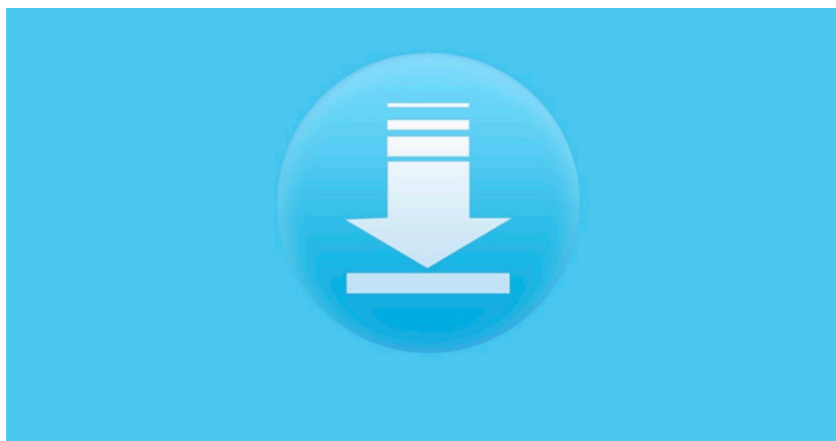

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 1 - Engine (Three-Cylinder) (Continued)
--

CONTENTS

Section	Description	Page
	Checks, Dimensions and Repairs	41
	Cylinder Block	41
	Crankshaft	43
	Main Bearings	45
	Flywheel	46
	Connecting Rods	47
	Pistons	48
	Valves	51
	Tappets	51
	Camshaft	52
	Valve Timing	53
	Cylinder Head	54
	Valve Seats	55
10 101 53	Valve Guides	56
10 101 60	Injector Sleeves	59
10 102 70	Crankshaft Front Oil Seal	61
10 106 12	Valve/Rocker Arm	63
10 254 44	Exhaust Pipe	65
	Removal	65
	Installation	65

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 2 - Cooling System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Cooling System	5
	Radiator	5
	Thermometer	5
	Thermostat	5
	Overhaul	6
10 402 11	Coolant Pump	6
	Removal	6
	Installation	7
10 402 28	Disassembly	8
	Assembly	8
10 414 10	Drive Belt Tension Adjustment	9
10 402 30	Cooling System Thermostat	10
	Removal	10
	Installation	11
10 406 10	Radiator	12
	Removal	12
	Installation	15

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 3 - Lubrication System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional View	4
	Description and Operation	5
	Oil Filter	5
	Low Oil Indicator	5
	Oil Pump	6

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 4 - Fuel System (Three-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Description and Operation	6
	Fuel Injection Pump (Bosch)	6
	Turbocharged Models	6
	All Models	8
	Overhaul	9
10 216 10	Fuel Tank	9
	Removal	9
	Installation	10
10 218 30	Fuel Injectors	11
	Removal	11
	Installation	12
10 246 14	Injection Pump	13
	Removal	13
	Lock Timing the Injection Pump On a Workbench	19
	Installation	24
	Check Fuel Injection Pump Timing with Pump Installed on Tractor	25

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 5 - Engine (Four-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	9
	Torque Settings with Angles	10
	Special Tools	11
	Description and Operation	12
	Sectional Views	12
	Troubleshooting	17
	Overhaul	21
10 001 10	Engine	21
	Removal	21
	Installation	31
	Compression Test	32
	Disassembly	33
	Assembly	44
	Checks, Measurements and Repairs	67
	Cylinder Block	67
	Crankshaft	70
	Connecting Rods	72
	Pistons	74
	Camshaft and Valves	78
	Cylinder Head	82
	Crankshaft Front Seal	83
	Crankshaft Rear Seal	85
	Adjusting Valve/Rocker Arm Clearance	88

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 5 - Engine (Four-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	9
	Torque Settings with Angles	10
	Special Tools	11
	Description and Operation	12
	Sectional Views	12
	Troubleshooting	17
	Overhaul	21
10 001 10	Engine	21
	Removal	21
	Installation	31
	Compression Test	32
	Disassembly	33
	Assembly	44
	Checks, Measurements and Repairs	67
	Cylinder Block	67
	Crankshaft	70
	Connecting Rods	72
	Pistons	74
	Camshaft and Valves	78
	Cylinder Head	82
	Crankshaft Front Seal	83
	Crankshaft Rear Seal	85
	Adjusting Valve/Rocker Arm Clearance	88

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 6 - Cooling System (Four-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Description of Operation	3
	Sectional Views	4
	Overhaul	5
10 402 10	Coolant Pump	5
	Removal	5
	Installation	6
10 402 30	Thermostart Valve	7
	Removal	7
	Installation	8
10 406 10	Radiator	9
	Removal	9
	Installation	12
10 414 10	Coolant Pump and Alternator Belts	13
	Tension Adjustment	13

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 7 - Lubrication System (Four-Cylinder)

CONTENTS

Section	Description	Page
	Specifications	2
	Lubrication System Components	4
	Low Oil Pressure Indicator	5
	Functional Checks	5
	Oil Filter	5
	Replacement	5

SECTION 10 - ENGINE

BOOK 1 - 87393636

Chapter 8 - Fuel System (Four-Cylinder)
--

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Description and Operation	6
	Fuel Injection Pump (Bosch)	6
	Turbocharged Engine	6
	All Models	8
	Overhaul	10
10 218 30	Fuel Injectors	10
	Removal	10
	Installation	11
10 246 14	Bosch Injection Pump	13
	Removal	13
	Lock-Timing the Injection Pump	15
	Lock Timing the Fuel Injection Pump On a Workbench	17
	Installation	19
	Check Fuel Injection Pump Timing with Pump Installed on Tractor	19

SECTION 18 - CLUTCH

BOOK 1 - 87393636

Chapter 1 - Clutch (3-Cylinder Models)

CONTENTS

Section	Description	Page
	Specifications	2
	Models With Mechanical Shuttle	2
	Models With Power Shuttle	2
	Tightening Torques	3
	Special Tools	3
	Sectional Views	4
	LUK 11 in/11 in Dual Clutch Pack	4
	LUK 11 in Single Clutch	5
	PTO Servo-Assist Control Valve	6
	Troubleshooting	7
	Description and Operation	8
	PTO Clutch Servo-Assist Control	8
	Engagement	8
	Disengagement	9
	Adjustment	9
	Overhaul	10
	Clutch	10
	Removal	10
	Disassembly	20
	Assembly	26
	Checks and Repair	27
	Flywheel	28
	Installation	29
	Clutch Pedal Adjustment	32

SECTION 18 - CLUTCH

BOOK 1 - 87393636

Chapter 2 - Clutch (4-Cylinder Models)

CONTENTS

Section	Description	Page
	Specifications	2
	Models With Mechanical Shuttle	2
	Models With Power Shuttle	2
	Tightening Torques	3
	Special Tools	3
	Sectional Views	4
	LUK 11 in/11 in Dual Clutch Pack	4
	LUK 11 in Single Clutch	5
	PTO Servo-Assist Control Valve	6
	Troubleshooting	7
	Description and Operation	8
	PTO Clutch Servo-Assist Control	8
	Engagement	8
	Disengagement	9
	Adjustment	9
	Overhaul	10
	Clutch	10
	Removal	10
	Disassembly	18
	Assembly	24
	Checks and Repair	25
	Flywheel	26
	Installation	27
	Clutch Pedal Adjustment	30

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87046863

Chapter 1 - 16 x 16 with Mechanical Shuttle Transmission

CONTENTS

Section	Description	Page
21 000	Main data	2
	Torque settings	3
	Tools	4
	Cross-sectional views	8
	Description and operation	12
	Troubleshooting	12
21 118 10	Rear transmission/gearbox casing. Removal - Installation	14
21 118 85	Gearbox transmission casing. Disassembly - Assembly	21
21 130 10	Gearbox control lever. Removal - Installation	31
21 130 11	Range gear control lever. Removal - Installation	32

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87046863

Chapter 2 - 16 x 16 with Power Shuttle Transmission
--

CONTENTS

Section	Description	Page
21 000	Main data	2
	Torque values	3
	Special tools	4
	Cross-sectional views	7
	Description and operation	11
21 118 85	Transmission-Gearbox. Disassembly - Assembly	12
21 134 46	Power shuttle control valve. Disassembly - Assembly	14
21 134 70	A + B Clutch valve solenoids. Removal - Installation	16
21 154 60	Dump valve solenoid. Removal - Installation	17
21 154 34	Clutch casing. Disassembly - Assembly	18

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87046863

Chapter 3 - Power Shuttle Transmission Calibration, Faults and Diagnostics

CONTENTS

Section	Description	Page
	Fault Codes Indication	3
	Description of Systems (ECM and CDU)	4
	Automatic Self-Diagnosis (ECM)	5
	ECM First Start Up (Self Configuration)	6
	Transmission Disabled Indicator Light	7
	Diagnosis During Operation	9
	Calibration and Diagnostics Unit (CDU)	10
	Power Shuttle Fault Code Priority	11
	Calibration and Diagnostic Unit Use	14
	HH Menu Access	15
	H1 - Clutches A and B Calibration	18
	H2 - Clutches A and B Calibration Values Display	23
	H3 - System Configuration	24
	H4 - Power Shuttle Hardware and Software Revision Levels	26
	H5 - Control Switch Diagnosis	27
	H6 - Clutch A Fill Time Modification and Display	32
	H7 - Clutch B Fill Time	34
	H8 - Erasure of Data Stored in the Non-Volatile Memory (NVM)	36
	H9 - Voltmeter Functions	37
	HA - Clutch Pedal Potentiometer and Status Switch	41
	Clutch Pedal Potentiometer Replacement and Clutch Pedal Switch Adjustment	43
	HC - Transmission Oil Temperature Sender	44
	HD - HI/LO Synchronizer Operation	45
	HE - Gear Change Adjustments	47
	HF - Stored Error Codes	48
	Troubleshooting Fault Codes	50
	Description of Systems (ECM and EST)	51
	Automatic Self-Diagnosis (ECM)	52
	ECM First Start Up (Self Configuration)	53
	Transmission Disabled Indicator Light	54
	Diagnosis During Operation	56
	Power Shuttle Fault Code Priority	58

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87046863

Chapter 3 - Power Shuttle Transmission Calibration, Faults and Diagnostics (Continued)

CONTENTS

Section	Description	Page
	Electronic Service Tool (EST)	61
	Downloading the Latest Software into the JX1060C, JX1070C and JX1075C Series Tractor Power Shuttle Control Module with the Electronic Service Tool	62
	Connecting the Electronic Service Tool (EST) to the Tractor	66
	H1 - Clutches A and B Calibration	70
	H2 - Clutches A and B Calibration Values Display	75
	H3 - System Configuration	76
	H4 - Power Shuttle Hardware and Software Revision Levels	78
	H5 - Control Switch Diagnosis	79
	H6 - Clutch A Fill Time Modification and Display	84
	H7 - Clutch B Fill Time	86
	H8 - Erasure of Data Stored in the Non-Volatile Memory (NVM)	88
	H9 - Voltmeter Functions	89
	HA - Clutch Pedal Potentiometer and Status Switch	93
	Clutch Pedal Potentiometer Replacement and Clutch Pedal Switch Adjustment	95
	HC - Transmission Oil Temperature Sender	96
	HD - HI/LO Synchronizer Operation	97
	HE - Gear Change Adjustments	99
	HF - Stored Error Codes	100
	Troubleshooting Fault Codes	102
	Fault Codes	104
	Power Shuttle (16 x 16) Electronic Control Module Input/Output Wiring Diagram	307

SECTION 23 - MFD TRANSFER BOX

BOOK 3 - 87046864

Chapter 1 - MFD Transfer Box

CONTENTS

Section	Description	Page
23 000	Main Data	1
	Torque settings	2
	Tools	3
	Cross-Sectional Views	5
	Description and Operation	8
	Troubleshooting	9
23 101 26	Transmission Shafts and Guard. Removal-Installation	10
23 101 42	Drive Gear Housing (Removed). Disassembly-Assembly Mechanical	12
23 202 52	Drive Gear Housing (Removed). Disassembly-Assembly Electro-hydraulic	14

SECTION 25 - FRONT AXLE (MFD)

BOOK 3 - 87046864

Chapter 1 - Front Axle (MFD)

CONTENT

Section	Description	Page
25 000	Main Data	1
	Tightening Torques	3
	Tools	5
	Cross-Sectional Views	7
	Description and Operation	8
25 100 30	Front axle. - Removal/Installation	9
25 100 38	Front axle. - Disassembly	13
25 102 27	Front axle differential with LIM-SLIP. Overhaul	18
25 108 46	Front axle. - Assembly	22
	Steering knuckle pins and bearings. - Replacement	23
	Stub axle adjustment	24
	Bevel drive adjustment	26
25 108 30	Front epicyclic final drive. Removal - Installation	33
44 511 80	Front wheels toe-in check	36

SECTION 27 - REAR MECHANICAL DRIVE

BOOK 3 - 87046864

Chapter 1 - Rear Mechanical Transmission

CONTENTS

Section	Description	Page
27 000	Main Data	1
	Tightening Torques	3
	Tools	5
	Cross-Sectional Views	9
	Troubleshooting	11
27 106 16	Rear Transmission Gearbox Removal-Installation	12
27 110 10	Differential Lock Engagement Sleeve-Adjustment	18
27 120 10	LH or RH Lateral Final Drive Box Assembly Removal-Installation	24
27 120 34	Drive Wheel Shaft Removal-Installation	27
27 120 32	Epicyclic Final Drive Removal-Installation	29

SECTION 31 - MECHANICAL POWER TAKE-OFF

BOOK 3 - 87046864

Chapter 1 - Servo-Assist PTO

CONTENTS

Section	Description	Page
31 000	Main Data	1
	Tools	3
	Tightening Torques	4
	PTO Servo-Assist Valve - Description and Operation	5
	Cross-Sectional Views	5
	Description and Operation of PTO	7
	PTO Clutch Engagement/Oil Flow	8
	PTO Clutch Disengagement/Oil Flow	9
	PTO Clutch Servo Control Adjustment	10
	Hydraulic PTO Servo Assist Cable Adjustment	11
	PTO Engaged Switch Adjustment	12
31 112 20	Mechanical PTO Assembly Removal-Installation	13
	PTO Brake	16

SECTION 33 - BRAKING SYSTEM

BOOK 3 - 87046864

Chapter 1 - Braking System

CONTENTS

Section	Description	Page
33 000	Main Data	1
	Torque Settings	2
	Cross-Sectional Views	3
	Tools	5
	Description and Operation	6
	Troubleshooting	7
33 202 60	Right or Left-Hand Brake. Removal-Installation	9
33 202 46	Braking System Hydraulic Pump. Removal-Installation	11
33 202 04	Brake Hydraulic System. Air Bleeding	16
33 110 40	Parking Brake Disks, Removal-Installation	18
33 110 08	Handbrake Control. Travel Adjustment	20

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87046865

Chapter 1 - High Pressure System Description and Operation

CONTENTS

Operation	Description	Page
	Precautionary statements	2
	Description and Operation	3
35 104	High-pressure system hydraulic pump	4
	Hydraulic system configuration table	5
35 110	Mechanically controlled hydraulic lift	6
	Fast Raise\Lower Control	8
	Hydraulic power lift (HPL) control valve oil flow	9
35 204	Remote control valves	12
	Rear remote valve arrangement	13
	Rear remote valve stacking	14
	Rear remote valve control levers	14
	Deluxe Quick-fit couplers	15
	Zero-pressure return port	15
	Mid-mount control valves (optional)	16
	Switching between single and double acting cylinders	16
	Double acting valve with automatic detent release and float	17
	Double-acting valve less automatic detent release and float	20
	Single-acting valve less automatic release and float	21
	JX1060C, JX1070C and JX1075C Hydraulic System Diagram	22

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87046865

Chapter 2 - High Pressure System Overhaul and Adjustment

CONTENTS

Operation	Description	Page
	Specifications	2
	Torque Settings	7
	Hydraulic Lift Tools	9
	Cross-sectional Views	11
	Hydraulic Lift Troubleshooting	18
35 110 40	Mechanically Controlled Lift Internal Controls Disassembly-Assembly	20
	Mechanically Controlled Lift Adjustments	24
35 110 08	Mechanically Controlled Lift Rod Mechanism Adjustments	30
	Lift Arm Descent Speed Adjustments	32
	Upper Stroke Limit Adjustment	32
	Adjusting the Upper Stroke Limit of the Fast Raise/Lower Control	33
35 110 42	Arm Shaft and Lift Cylinder Disassembly-Assembly	34
35 114 14	Mechanically Controlled Lift Control Valve Disassembly-Assembly	38
35 114 30	Lift Pressure Relief Valve Removal-installation	42
35 114 32	Lift Pressure Relief Valve (Calibration)	42
35 104 30	Pump Models C 42, Bosch 25	44
35 104 30	High Pressure (Lift) Pump Disassembly-Assembly	44
35 204 46	Remote Control Valves Disassembly-Assembly	45
	Adjustment of the Automatic Detent Release Pressure	47

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87046865

Chapter 3 - Low-Pressure System Description and Operation

CONTENTS

Operation	Description	Page
35 260	Low-pressure, steering and lubrication system – General Description	2
	Low-pressure oil flow	5
	Transmission lubrication system	6
	Steering system oil flow	7
	Electro-hydraulic controlled (MFD) for 40 KPH transmissions	8
	PTO servo-assist valve and Piston	9

SECTION 35 - HYDRAULIC SYSTEM

BOOK 4 - 87046865

Chapter 4 - Low-Pressure System Test Fitting Locations

CONTENTS

Operation	Description	Page
	System test fitting locations	2

SECTION 41 - STEERING

BOOK 4 - 87046865

Chapter 1 - Steering

CONTENTS

Operation	Description	Page
	Torque Settings Main Data - Tools	2
	Description and Operation	3
	Troubleshooting	10
41 204 10	Hydrostatic steering wheel. Removal-Installation	12
41 204 30	Hydrostatic steering control valve. Removal-Installation	13
41 204 34	Hydrostatic steering control valve removed. Disassembly-Assembly	16
41 204 38	Hydrostatic steering control valve. Bench testing	32
41 216 10	Steering control cylinder. Removal-Installation	35
41 216 18	Steering control cylinder. Disassembly-Assembly	36

SECTION 41 - STEERING

BOOK 4 - 87046865

Chapter 2 - Open Center Flow Gear Pump

CONTENTS

Operation	Description	Page
	Main Data	1
	Torque Settings	2
	Description and Operation	4
41 206 20	Hydrostatic Steering Oil Pump - Disassembly-Assembly (with unit removed)	5