

---

# **FARMALL 85U, FARMALL 95U, FARMALL 105U REPAIR MANUAL COMPLETE CONTENTS**

|                                                              |           |
|--------------------------------------------------------------|-----------|
| <b>SECTION 00 - GENERAL .....</b>                            | <b>2</b>  |
| <b>SECTION 10 - ENGINE .....</b>                             | <b>2</b>  |
| <b>SECTION 18 - CLUTCH .....</b>                             | <b>4</b>  |
| <b>SECTION 21 - TRANSMISSIONS .....</b>                      | <b>5</b>  |
| <b>SECTION 23 - DRIVE LINES .....</b>                        | <b>10</b> |
| <b>SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION .....</b> | <b>11</b> |
| <b>SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION .....</b>  | <b>12</b> |
| <b>SECTION 31 - POWER TAKE-OFF .....</b>                     | <b>14</b> |
| <b>SECTION 33 - BRAKING SYSTEM .....</b>                     | <b>16</b> |
| <b>SECTION 35 - HYDRAULIC SYSTEMS .....</b>                  | <b>18</b> |
| <b>SECTION 41 - STEERING .....</b>                           | <b>27</b> |
| <b>SECTION 44 - AXLES AND WHEELS .....</b>                   | <b>28</b> |
| <b>SECTION 50 - CAB AIR CONDITIONING SYSTEM .....</b>        | <b>29</b> |
| <b>SECTION 55 - ELECTRICAL SYSTEM .....</b>                  | <b>31</b> |
| <b>SECTION 90 - BODYWORK AND DRIVING POSITION .....</b>      | <b>53</b> |

**The following pages are the collation of the contents pages from each section and chapter of the Farmall 85U, Farmall 95U, Farmall 105U Repair manual. Complete Repair part # 87758608.**

**The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.**

**The sections listed above are the sections utilized for the Farmall 85U, Farmall 95U, Farmall 105U Tractors.**

---

## SECTION 00 - GENERAL

BOOK 1 - 87758609

### Chapter 1 - General

#### CONTENTS

| Section | Description                                          | Page |
|---------|------------------------------------------------------|------|
|         | General Instructions .....                           | 3    |
|         | Health and Safety .....                              | 5    |
|         | Precautionary Statements .....                       | 15   |
|         | Safety .....                                         | 16   |
|         | Ecology and the Environment .....                    | 19   |
|         | Minimum Hardware Tightening Torques .....            | 20   |
|         | Federal Emissions Warranty .....                     | 22   |
|         | California Emission Control Warranty Statement ..... | 23   |
|         | Consumables .....                                    | 25   |

## SECTION 10 - ENGINE

BOOK 1 - 87758609

### Chapter 1 - Engine

#### CONTENT

| Section | Description            | Page |
|---------|------------------------|------|
|         | Specifications .....   | 3    |
|         | Fuel System Data ..... | 6    |
|         | Torques .....          | 7    |
|         | Special Tools .....    | 10   |
|         | Sectional Views .....  | 11   |
|         | Troubleshooting .....  | 12   |
|         | Overhaul .....         | 16   |
|         | Engine .....           | 16   |
|         | Removal .....          | 16   |
|         | Installation .....     | 36   |

---

## SECTION 10 - ENGINE

BOOK 1 - 87758609

|                                       |
|---------------------------------------|
| <b>Chapter 1 - Engine (Continued)</b> |
|---------------------------------------|

### CONTENT

| Section | Description                                  | Page |
|---------|----------------------------------------------|------|
|         | Crankshaft Front Seal .....                  | 38   |
|         | Removal .....                                | 38   |
|         | Installation .....                           | 40   |
|         | Crankshaft Rear Seal .....                   | 41   |
|         | Removal .....                                | 41   |
|         | Installation .....                           | 42   |
|         | Valve Tappet and Rocker Arm Clearance .....  | 43   |
|         | Adjustment .....                             | 43   |
|         | Assembly .....                               | 46   |
|         | Engine Injector .....                        | 46   |
|         | Removal .....                                | 46   |
|         | Installation .....                           | 48   |
|         | Bosch Injection Pump .....                   | 49   |
|         | Removal .....                                | 49   |
|         | Installation .....                           | 53   |
|         | Injection Pump Timing .....                  | 54   |
|         | Disassembly .....                            | 55   |
|         | Assembly .....                               | 56   |
|         | Fuel Circuit Air Bleeding .....              | 60   |
|         | Coolant Pump .....                           | 60   |
|         | Removal .....                                | 60   |
|         | Installation .....                           | 61   |
|         | Thermostat Valve .....                       | 62   |
|         | Removal .....                                | 62   |
|         | Installation .....                           | 63   |
|         | Radiator .....                               | 64   |
|         | Removal .....                                | 64   |
|         | Installation .....                           | 71   |
|         | Coolant Pump and Generator Drive Belts ..... | 72   |
|         | Adjusting Tension .....                      | 72   |

---

## SECTION 18 - CLUTCH

BOOK 1 - 87758609

|                           |
|---------------------------|
| <b>Chapter 1 - Clutch</b> |
|---------------------------|

### CONTENT

| Section | Description                                                                                                | Page |
|---------|------------------------------------------------------------------------------------------------------------|------|
|         | Specifications .....                                                                                       | 2    |
|         | Torques .....                                                                                              | 3    |
|         | Special Tools .....                                                                                        | 3    |
|         | Sectional Views .....                                                                                      | 4    |
|         | Longitudinal Section of 12" LUK Clutch .....                                                               | 4    |
|         | Electrohydraulic Power Take-off .....                                                                      | 4    |
|         | Longitudinal Section of 12"/12" LUK Clutch .....                                                           | 4    |
|         | Mechanical Power Take-off .....                                                                            | 4    |
|         | Longitudinal Section Through Flexible Coupling .....                                                       | 5    |
|         | Power Shuttle Unit .....                                                                                   | 5    |
|         | Troubleshooting .....                                                                                      | 6    |
|         | Overhaul .....                                                                                             | 7    |
|         | Checks, Measurements and Repairs - 12"/12" Dual Clutch .....                                               | 7    |
|         | Minimum Permissible Dimensions After Refacing of Parts Subject to<br>Wear in the 12"/12" Dual Clutch ..... | 7    |
|         | Main Transmission Clutch Release .....                                                                     | 8    |
|         | Adjustment .....                                                                                           | 8    |
|         | Clutch .....                                                                                               | 10   |
|         | Removal .....                                                                                              | 10   |
|         | Installation .....                                                                                         | 11   |
|         | Dual Clutch 12"/12" .....                                                                                  | 12   |
|         | Disassembly .....                                                                                          | 12   |
|         | Assembly .....                                                                                             | 16   |
|         | Coplanarity Adjustment of Dual Clutch Release Levers .....                                                 | 16   |
|         | Single Disk Clutch .....                                                                                   | 17   |

---

## SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

|                           |
|---------------------------|
| <b>Chapter 1- Shuttle</b> |
|---------------------------|

### CONTENT

| Section | Description                     | Page |
|---------|---------------------------------|------|
|         | Specifications .....            | 2    |
|         | Transmission Diagrams .....     | 3    |
|         | Torques .....                   | 4    |
|         | Special Tools .....             | 5    |
|         | Sectional Views .....           | 5    |
|         | Description and Operation ..... | 9    |
|         | Troubleshooting .....           | 9    |
|         | Overhaul .....                  | 10   |
|         | Clutch-Reverser Casing .....    | 10   |
|         | Disassembly .....               | 10   |
|         | Installation .....              | 14   |

---

## SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

|                                              |
|----------------------------------------------|
| <b>Chapter 2 - Reverser and Creeper Unit</b> |
|----------------------------------------------|

### CONTENT

| Section | Description                                                                                                  | Page |
|---------|--------------------------------------------------------------------------------------------------------------|------|
|         | Specifications .....                                                                                         | 2    |
|         | Transmission Diagrams .....                                                                                  | 3    |
|         | Torques .....                                                                                                | 4    |
|         | Special Tools .....                                                                                          | 5    |
|         | Sectional Views .....                                                                                        | 7    |
|         | Description and Operation .....                                                                              | 11   |
|         | Troubleshooting .....                                                                                        | 11   |
|         | Overhaul .....                                                                                               | 12   |
|         | Reverser-Clutch Casing and Creeper Unit .....                                                                | 12   |
|         | Disassembly .....                                                                                            | 12   |
|         | Assembly .....                                                                                               | 17   |
|         | Installation .....                                                                                           | 18   |
|         | End Float Adjustment Between Gearbox Main Shaft and Clutch<br>Casing Output Shaft Synchronizer Support ..... | 19   |

---

## SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

### Chapter 3 - Power Shuttle Transmission - Version 12x12

#### CONTENT

| Section | Description                                                       | Page |
|---------|-------------------------------------------------------------------|------|
|         | Specifications . . . . .                                          | 3    |
|         | Transmission Diagrams . . . . .                                   | 6    |
|         | Torques . . . . .                                                 | 7    |
|         | Special Tools . . . . .                                           | 9    |
|         | Sectional Views . . . . .                                         | 11   |
|         | Description and Operation . . . . .                               | 19   |
|         | Speed Transmission . . . . .                                      | 19   |
|         | Power Shuttle Unit . . . . .                                      | 19   |
|         | Main Hydraulic Circuit . . . . .                                  | 20   |
|         | Power Shuttle Transmission - Lubrication Circuit . . . . .        | 20   |
|         | Power Shuttle Transmission - Clutch A At Rest / Engaged . . . . . | 20   |
|         | Overhaul . . . . .                                                | 21   |
|         | Range and Gear Position Sensor Adjustment . . . . .               | 21   |
|         | Gear Lever Status Switch . . . . .                                | 21   |
|         | Range Lever Status Switches . . . . .                             | 21   |
|         | Adjustment Check . . . . .                                        | 22   |
|         | Clutch Casing With Power Shuttle . . . . .                        | 23   |
|         | Disassembly . . . . .                                             | 23   |
|         | Assembly . . . . .                                                | 28   |
|         | Driving Shaft . . . . .                                           | 29   |
|         | Disassembly . . . . .                                             | 29   |
|         | Assembly . . . . .                                                | 30   |
|         | Clutch A . . . . .                                                | 30   |
|         | Disassembly . . . . .                                             | 30   |
|         | Assembly . . . . .                                                | 33   |
|         | Clutch B . . . . .                                                | 38   |
|         | Disassembly - Assembly . . . . .                                  | 38   |
|         | Calibrations . . . . .                                            | 40   |
|         | Fault Codes . . . . .                                             | 40   |
|         | HH Menu Access . . . . .                                          | 40   |
|         | Clutch Calibration H1 Menu Transmission . . . . .                 | 42   |
|         | Transmission Fault Codes . . . . .                                | 45   |
|         | Description of Fault Codes . . . . .                              | 46   |

---

## SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

|                                                                                                    |
|----------------------------------------------------------------------------------------------------|
| <b>Chapter 4 - Power Shuttle Transmission With Dual Command<br/>(2 Speed Power Shift) Function</b> |
|----------------------------------------------------------------------------------------------------|

### CONTENT

| Section | Description                                                                                     | Page |
|---------|-------------------------------------------------------------------------------------------------|------|
|         | Specifications .....                                                                            | 3    |
|         | Transmission Diagrams .....                                                                     | 5    |
|         | Bolt Torques .....                                                                              | 6    |
|         | Special Tools .....                                                                             | 8    |
|         | Sectional Views .....                                                                           | 10   |
|         | Description and Operation .....                                                                 | 21   |
|         | Speed Transmission .....                                                                        | 21   |
|         | Power Shuttle Unit .....                                                                        | 21   |
|         | Dual Command (2 Speed Power Shift) Unit .....                                                   | 21   |
|         | Overhaul .....                                                                                  | 22   |
|         | Range and Gear Position Sensor Adjustment .....                                                 | 22   |
|         | Gear Lever Status Switch .....                                                                  | 22   |
|         | Range Lever Status Switches .....                                                               | 22   |
|         | Adjustment Check .....                                                                          | 23   |
|         | Clutch Casing With Power Shuttle Unit and Dual Command<br>(2 Speed Power Shift) Functions ..... | 24   |
|         | Removal .....                                                                                   | 24   |
|         | Installation .....                                                                              | 33   |
|         | Disassembly .....                                                                               | 36   |
|         | Assembly .....                                                                                  | 43   |
|         | Driving Shaft .....                                                                             | 45   |
|         | Disassembly .....                                                                               | 45   |
|         | Assembly .....                                                                                  | 46   |
|         | Driven Shaft .....                                                                              | 46   |
|         | Disassembly .....                                                                               | 46   |
|         | Assembly .....                                                                                  | 48   |
|         | Clutch A .....                                                                                  | 49   |
|         | Disassembly .....                                                                               | 49   |
|         | Assembly .....                                                                                  | 52   |



---

**SECTION 21 - TRANSMISSIONS**

**BOOK 1 - 87758609**

|                                                                                                                       |
|-----------------------------------------------------------------------------------------------------------------------|
| <p><b>Chapter 4 - Power Shuttle Transmission With Dual Command<br/>(2 Speed Power Shift) Function (Continued)</b></p> |
|-----------------------------------------------------------------------------------------------------------------------|

**CONTENT**

| <b>Section</b> | <b>Description</b>                            | <b>Page</b> |
|----------------|-----------------------------------------------|-------------|
|                | Clutch B .....                                | 56          |
|                | Disassembly / Assembly .....                  | 56          |
|                | Calibrations .....                            | 57          |
|                | Fault Codes .....                             | 57          |
|                | HH Menu Access .....                          | 57          |
|                | Clutch Calibration H1 Menu Transmission ..... | 59          |
|                | Description of Fault Codes .....              | 61          |
|                | Transmission Fault Codes .....                | 62          |
|                | Description of Fault Codes .....              | 63          |

---

## SECTION 23 - DRIVE LINES

BOOK 2 - 87758610

|                                |
|--------------------------------|
| <b>Chapter 1 - Drive Lines</b> |
|--------------------------------|

### CONTENT

| Section | Description                                                       | Page |
|---------|-------------------------------------------------------------------|------|
|         | Specifications .....                                              | 2    |
|         | Torques .....                                                     | 3    |
|         | Special Tools .....                                               | 3    |
|         | Sectional Views .....                                             | 4    |
|         | Description and Operation .....                                   | 5    |
|         | Electro-hydraulically Engaged Drive Gear .....                    | 5    |
|         | Troubleshooting .....                                             | 6    |
|         | Overhaul .....                                                    | 7    |
|         | Services Control Valve .....                                      | 7    |
|         | Removal .....                                                     | 7    |
|         | Installation .....                                                | 10   |
|         | Services Control Valve (For Tractors Without Power Shuttle) ..... | 11   |
|         | Disassembly .....                                                 | 11   |
|         | Assembly .....                                                    | 12   |
|         | Drive Gear Assembly .....                                         | 13   |
|         | Removal .....                                                     | 13   |
|         | Installation .....                                                | 18   |
|         | Drive Gear Housing Removed .....                                  | 19   |
|         | Disassembly .....                                                 | 19   |
|         | Assembly .....                                                    | 23   |

---

## SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758610

|                                                       |
|-------------------------------------------------------|
| <b>Chapter 1 - Front Axle Mechanical Transmission</b> |
|-------------------------------------------------------|

### CONTENT

| Section | Description                                                      | Page |
|---------|------------------------------------------------------------------|------|
|         | Specifications .....                                             | 3    |
|         | Torques .....                                                    | 6    |
|         | Special Tools .....                                              | 9    |
|         | Sectional Views .....                                            | 11   |
|         | Description and Operation .....                                  | 16   |
|         | LIM-Slip Self-locking Differential Operation .....               | 16   |
|         | Front Differential Lock .....                                    | 17   |
|         | Rules for Correctly Fitting the Axle Support to the Engine ..... | 18   |
|         | Troubleshooting .....                                            | 19   |
|         | Overhaul .....                                                   | 20   |
|         | Front Axle .....                                                 | 20   |
|         | Removal .....                                                    | 20   |
|         | Installation .....                                               | 23   |
|         | Disassembly .....                                                | 24   |
|         | Assembly .....                                                   | 33   |
|         | Front Axle Differential .....                                    | 34   |
|         | Overhaul .....                                                   | 34   |
|         | Front Axle Differential With LIM-Slip Unit .....                 | 36   |
|         | Overhaul .....                                                   | 36   |
|         | Front Axle Differential Lock Clutch Assembly .....               | 38   |
|         | Overhaul .....                                                   | 38   |
|         | Front Epicyclic Final Drive Without Brake .....                  | 40   |
|         | Disassembly .....                                                | 40   |
|         | Assembly .....                                                   | 41   |
|         | Front Epicyclic Final Drive With Brake .....                     | 43   |
|         | Disassembly .....                                                | 43   |
|         | Assembly .....                                                   | 45   |
|         | Wheel Hub Seal With Brake .....                                  | 46   |
|         | Replacement .....                                                | 46   |
|         | Stub Axle Adjustments .....                                      | 47   |
|         | Pinion and Crown Wheel Adjustments .....                         | 49   |

---

## SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758610

|                                                                   |
|-------------------------------------------------------------------|
| <b>Chapter 1 - Front Axle Mechanical Transmission (Continued)</b> |
|-------------------------------------------------------------------|

### CONTENT

| Section | Description                                                                                                                 | Page |
|---------|-----------------------------------------------------------------------------------------------------------------------------|------|
|         | Adjusting the Bevel Pinion Shaft Bearing Preload With Shims . . . . .                                                       | 49   |
|         | Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance<br>Between the Sides of the Bevel Drive Teeth . . . . . | 51   |

## SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758610

|                                                      |
|------------------------------------------------------|
| <b>Chapter 1 - Rear Axle Mechanical Transmission</b> |
|------------------------------------------------------|

### CONTENT

| Section | Description                                                             | Page |
|---------|-------------------------------------------------------------------------|------|
|         | Specifications . . . . .                                                | 3    |
|         | Torques . . . . .                                                       | 6    |
|         | Special Tools . . . . .                                                 | 8    |
|         | Sectional View . . . . .                                                | 13   |
|         | Description and Operation . . . . .                                     | 19   |
|         | Hydraulically Controlled Rear Differential Lock . . . . .               | 19   |
|         | Troubleshooting . . . . .                                               | 20   |
|         | Overhaul . . . . .                                                      | 22   |
|         | Rear Gearbox - Transmission Casing . . . . .                            | 22   |
|         | Removal . . . . .                                                       | 22   |
|         | Installation . . . . .                                                  | 36   |
|         | Disassembly . . . . .                                                   | 39   |
|         | Assembly . . . . .                                                      | 46   |
|         | Gearbox Transmission Casing . . . . .                                   | 49   |
|         | Gearbox Driving Shaft End Float Adjustment . . . . .                    | 49   |
|         | Adjusting the Position of Differential Lock Engagement Sleeve . . . . . | 50   |

---

## SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758610

|                                                                  |
|------------------------------------------------------------------|
| <b>Chapter 1 - Rear Axle Mechanical Transmission (Continued)</b> |
|------------------------------------------------------------------|

### CONTENT

| Section | Description                                                                                                | Page |
|---------|------------------------------------------------------------------------------------------------------------|------|
|         | Pinion and Crown Wheel Adjustments .....                                                                   | 51   |
|         | Determining the Bevel Pinion Positioning Adjustment Ring .....                                             | 51   |
|         | Adjusting the Bevel Gear Pair .....                                                                        | 53   |
|         | Tapered Roller Bearings Adjustment for Pinion Shaft .....                                                  | 53   |
|         | Adjusting the Bevel Crown Wheel Bearings and Checking the<br>Clearance Between the Bevel Drive Teeth ..... | 54   |
|         | Bevel Drive Adjustments .....                                                                              | 56   |
|         | Adjusting the Preloading on the Bevel Drive Bearings .....                                                 | 56   |
|         | Adjustment of the Clearance Between the Sun and Planet Pinion Teeth .....                                  | 58   |
|         | Differential Lock Control Pedal Stroke .....                                                               | 61   |
|         | Final Drive Casing .....                                                                                   | 61   |
|         | Removal .....                                                                                              | 61   |
|         | Installation .....                                                                                         | 64   |
|         | Epicyclic Final Drive .....                                                                                | 65   |
|         | Disassembly - Assembly .....                                                                               | 65   |
|         | Drive Wheel Shaft .....                                                                                    | 66   |
|         | Disassembly .....                                                                                          | 66   |
|         | Assembly .....                                                                                             | 67   |

---

## SECTION 31 - POWER TAKE-OFF

BOOK 2 - 87758610

|                                              |
|----------------------------------------------|
| <b>Chapter 1 - Mechanical Power Take-off</b> |
|----------------------------------------------|

### CONTENT

| Section | Description                                          | Page |
|---------|------------------------------------------------------|------|
|         | Specifications .....                                 | 2    |
|         | Special Tools .....                                  | 3    |
|         | Torques .....                                        | 4    |
|         | Sectional Views .....                                | 5    |
|         | Description and Operation .....                      | 10   |
|         | Mechanical PTO .....                                 | 10   |
|         | PTO Controlled Directly from the Engine Clutch ..... | 10   |
|         | PTO Synchronized With Gears .....                    | 11   |
|         | Selecting the Speed With the Lever .....             | 11   |
|         | Cooling System .....                                 | 12   |
|         | Troubleshooting .....                                | 12   |
|         | Overhaul .....                                       | 15   |
|         | Power Take-off Housing .....                         | 15   |
|         | Removal .....                                        | 15   |
|         | Installation .....                                   | 18   |
|         | Mechanical Power Take-off Shafts .....               | 19   |
|         | Disassembly .....                                    | 19   |
|         | Assembly .....                                       | 22   |

---

## SECTION 31 - POWER TAKE-OFF

BOOK 2 - 87758610

### Chapter 2 - Electro-hydraulic PTO

#### CONTENT

| Section | Description                                                                                     | Page |
|---------|-------------------------------------------------------------------------------------------------|------|
|         | Specifications .....                                                                            | 2    |
|         | Torques .....                                                                                   | 5    |
|         | Special Tools .....                                                                             | 6    |
|         | Sectional Views .....                                                                           | 7    |
|         | Description and Operation .....                                                                 | 15   |
|         | Electrohydraulic PTO .....                                                                      | 15   |
|         | PTO Independent Electro-hydraulically Controlled Power Take-off<br>(Directly by Flywheel) ..... | 15   |
|         | Selecting the Speed With the Lever .....                                                        | 17   |
|         | PTO Synchronized to Gearbox .....                                                               | 19   |
|         | Rod (4) in the PTO Synchronized With Gearbox Position .....                                     | 20   |
|         | 540-1000 RPM Electrohydraulic PTO "NASO" Version .....                                          | 21   |
|         | 540 RPM PTO With Electrohydraulic Engagement .....                                              | 21   |
|         | Hydraulic System .....                                                                          | 22   |
|         | Additional PTO Controls for Cab-version Tractors With Power<br>Shuttle Transmissions .....      | 25   |
|         | External Controls on Mudguards (If Installed) .....                                             | 25   |
|         | Modulating Function Selection (If Installed) .....                                              | 26   |
|         | Rear PTO Fault Code Listing .....                                                               | 26   |
|         | Troubleshooting .....                                                                           | 27   |
|         | Overhaul .....                                                                                  | 28   |
|         | Power Take-off Clutch Brake .....                                                               | 28   |
|         | Removal .....                                                                                   | 28   |
|         | Installation .....                                                                              | 30   |
|         | Electro-hydraulic Power Take-off Housing .....                                                  | 30   |
|         | Removal .....                                                                                   | 30   |
|         | Installation .....                                                                              | 33   |
|         | Disassembly .....                                                                               | 35   |
|         | Assembly .....                                                                                  | 43   |
|         | Cooling System .....                                                                            | 44   |

Thank you for choosing  
CasetractorManuals

Please click the following link to  
download and purchase

