
JX1080U, JX1090U, JX1100U REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	4
SECTION 21 - TRANSMISSIONS	5
SECTION 23 - MFD TRANSFER BOX	9
SECTION 25 - MFD AXLE	10
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	11
SECTION 31 - POWER TAKE-OFF	12
SECTION 33 - BRAKES	13
SECTION 35 - HYDRAULIC SYSTEMS	14
SECTION 41 - STEERING	21
SECTION 44 - AXLES AND WHEELS	22
SECTION 50 - AUXILIARY UNITS	23
SECTION 55 - ELECTRICAL SYSTEMS	25
SECTION 90 - CAB, PLATFORM AND BODYWORK	35


The following pages are the collation of the contents pages from each section and chapter of the JX1080U, JX1090U, JX1100U Repair manual. Complete Repair part # 87054727.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the JX1080U, JX1090U, JX1100U Tractors.

Thank you for choosing
CasetractorManuals

Please click the following link to
download and purchase

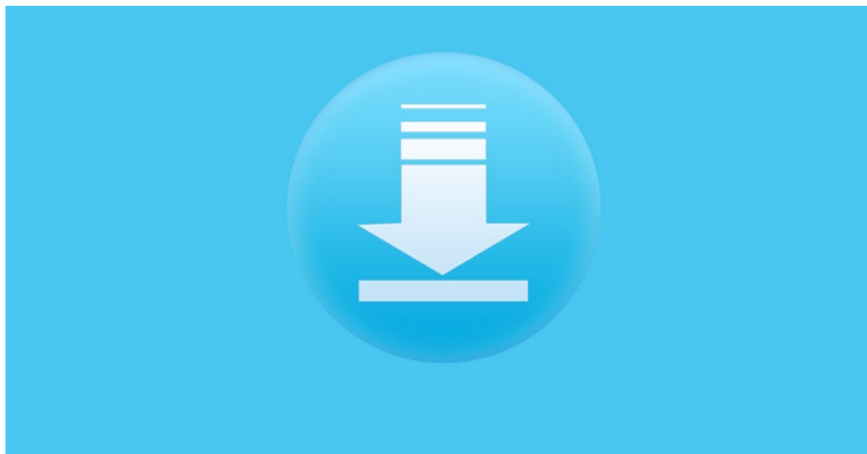

SECTION 00 - GENERAL

BOOK 1 - 87054728

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Filling and Topping-Up Operations	25

SECTION 10 - ENGINE

BOOK 1 - 87054728

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	3
	Tightening Torques	12
	Torque Settings with Angle	13
	Special Tools	14
	Description and Operation	15
	Sectional Views	15
	Troubleshooting	22
	Overhaul	26
10 001 10	Engine	26
	Removal	26
	Installation	43
	Disassembly	46
	Assembly	57

SECTION 10 - ENGINE

BOOK 1 - 87054728

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Checks, Measurements and Repairs	80
	Cylinder Block Liners	80
	Crankshaft	83
	Connecting Rods	85
	Pistons	87
	Camshaft and Valves	91
	Cylinder Head	95
	Oil Pressure Indicator	96
	Oil Filter	96
	Cooling System	97
	Crankshaft Front Seal	98
	Removal	98
	Installation	100
10 102 74	Crankshaft Rear Seal	101
	Removal	101
	Installation	102
10 106 12	Valve Tappet and Rocker Arm	104
	Clearance Adjustment	104
10 218 30	Fuel Injectors	107
	Removal	107
	Installation	108
10 246 14	Bosch Injection Pump	110
	Removal	110
	Installation	113
	Timing Procedure	115
	Fuel Circuit Air Bleeding	117
	Turbocharged Diesel Engine	118
10 402 10	Coolant Pump	121
	Removal	121
	Installation	122

SECTION 10 - ENGINE

BOOK 1 - 87054728

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
10 402 30	Thermostart Valve	123
	Removal	123
	Installation	124
10 406 10	Radiator	125
	Removal	125
	Installation	129
10 414 10	Coolant Pump and Alternator Drive Belts	131
	Tension Adjustment	131

SECTION 18 - CLUTCH

BOOK 1 - 87054728

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	3
	Description and Operation	4
	Cross Sectional Views	4
	Troubleshooting	5
	Overhaul	6
	Inspection and Adjustment	6
	12" Clutch	6
	Clutch Pedal	7
18 110 10	Clutch	8
	Removal	8
	Installation	9
	Adjust Release Levers	11

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87054729

Chapter 1 - 12 x 12 Synchronized Mechanical Shuttle Transmission

CONTENTS

Section	Description	Page
	12 x 12 Synchronized Mechanical Shuttle Transmission	3

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87054729

Chapter 2 - Reverser (12 x 12 Synchronized Mechanical Shuttle Transmissions)

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	4
	Sectional Views	4
	Description and Operation	6
	Troubleshooting	6
	Overhaul	7
21 110 85	Clutch-Reverser Casing	7
	Removal	7
	Disassembly	7
	Assembly	10
	Installation	10

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87054729

Chapter 3 - 20 x 12 Two-Speed Powershift with Synchronized Mechanical Shuttle Transmission and Creeper

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	4
	Sectional Views	6
	Description and Operation	8
	Troubleshooting	8
21 110 87	Reverser-clutch Casing and Creeper Unit	9
	Removal	9
	Disassembly	9
	Assembly	13
	Installation	13

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87054729

Chapter 4 - 24 x 24 Two-Speed Powershift with Power Shuttle Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	4
	Special Tools	6
	Sectional Views	8
	Description and Operation	11
	Overhaul	18
21 110 88	Clutch Casing with Two-Speed Powershift and Power Shuttle	18
	Disassembly	18
	Assembly	23
21 154 60	Clutch (A)	25
	Disassembly	25
	Assembly	27
21 154 60	Clutch (B)	30
	Disassembly - Assembly	30

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87054729

Chapter 5 - 24 x 12 Two-Speed Powershift with Synchronized Mechanical Shuttle

CONTENTS

Operation	Description	Page
	Specifications	2
	Tightening Torques	4
	Special Tools	5
	Sectional Views	6
	Description and Operation	9
	Troubleshooting	16
	Overhaul	18
21 110 10	Clutch Casing with Two-Speed Power Shift	18
	Removal	18
	Installation	25
21 110 87	Clutch Casing with Two-Speed Power Shift	27
	Disassembly	27
	Assembly	35
21 168 05	Two-Speed Power Shift Control Rod Adjustments	36
21 168 21	Two-Speed Power Shift Solenoid Valve	37
	Removal	37
	Installation	40
21 168 22	Two-Speed Power Shift Control Valve	41
	Removal	41
	Installation	45
	Disassembly	45
	Assembly	47

SECTION 23 - MFD TRANSFER BOX

BOOK 2 - 87054729

Chapter 1 - MFD Transfer Box

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	4
	Description and Operation	5
	Sectional Views	5
	Troubleshooting	7
	Overhaul	8
23 202 20	Services Control Valve	8
	Removal	8
	Installation	10
	Disassembly	11
	Assembly	12
23 202 50	Drive Gear Assembly	13
	Removal	13
	Installation	17
23 202 52	Drive Gear Housing	18
	Disassembly	18
	Assembly	21

SECTION 25 - MFD AXLE

BOOK 2 - 87054729

Chapter 1 - Front Mechanical Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	4
	Special Tools	6
	Description and Operation	9
	Cross-Sectional Views	9
	Front Differential Lock	11
	Troubleshooting	12
	Overhaul	13
25 100 30	Front Axle	13
	Removal	13
	Installation	16
	Correctly Installing Axle Support to the Engine	17
	Disassembly	18
	Assembly	26
25 102 24	Front Axle Differential	27
	Adjusting Backlash Between Side and Planetary Pinion Teeth	27
25 104 34	Front Differential Lock Clutch	28
	Disassembly	28
	Assembly	29
25 108 30	Front Epicyclic Final Drive	30
	Removal	30
	Installation	31
	Wheel Hub Seal	33
	Removal	33
	Installation	33
25 108 46	Steering Knuckle Pins and Bearings	34
	Removal	34
	Installation	34
	Adjustments	35
	Stub Axle	35
	Pinion	37
	Differential	38
	Ring Gear Bearings	41

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87054729

Chapter 1 - Rear Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Drive and Differential Data	2
	Final Drive Data	3
	Tightening Torques	3
	Special Tools	5
	Description and Operation	10
	Cross-Sectional Views	10
	Hydraulically Controlled Rear Differential Lock	14
	Troubleshooting	15
	Drive and Differential	15
	Final Drive	15
	Hydraulically Controlled Differential Lock	16
	Overhaul	17
21 118 12	Rear Gearbox - Transmission Casing	17
	Removal	17
	Installation	36
21 118 85	Gearbox - Transmission Casing	39
	Disassembly	39
	Assembly	44
	Adjustments	47
	Adjusting the Pinion Shaft	51
	Final Drive Casing	59
	Removal	59
	Installation	61
	Epicyclic Final Drive	62
	Disassembly	62
	Assembly	62
27 120 34	Drive Wheel Shaft	63
	Disassembly	63
	Assembly	64

SECTION 31 - POWER TAKE-OFF

BOOK 3 - 87054730

Chapter 1 - Electro-Hydraulic Power Take-Off

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Tightening Torques	4
	Description and Operation	5
	Sectional Views	5
	Electro-Hydraulic PTO	8
	PTO Engagement	9
	Troubleshooting	15
	Overhaul	16
31 114 64	PTO Clutch Brake	16
	Removal	16
	Installation	18
31 116 21	PTO Housing	19
	Removal	19
	Installation	22
	Disassembly	23
	Assembly	29

SECTION 33 - BRAKES

BOOK 3 - 87054730

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Description of Operation	4
	Sectional Views	4
	Troubleshooting	7
	Overhaul	8
33 110 08	Handbrake Lever	8
	Adjustment	8
	Parking Brake Housing	9
	Removal	9
	Disassembly	9
	Assembly	11
	Installation	11
33 202 04	Brake System Bleeding	12
33 202 46	Brake Pump	13
	Removal	13
	Installation	14
	Adjustment of Pedal Travel	14
33 202 60	Brake Units	15
	Removal	15
	Installation	18

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87054730

Chapter 1 - Hydraulic System - All Models

CONTENTS

Section	Description	Page
	Pump Specifications	3
	High Pressure System Lift Pump for JX1080U, JX1090U and JX1100U with 2WD and Mechanical Shuttle Transmissions	3
	High Pressure System Lift Pump for JX1080U, JX1090U and JX1100U with Power Shuttle Transmission and on All Models With MFD	4
	Precautionary Statements	6
	Hydraulic System Configurations	7
	Hydraulic System - General Description	8
	Low Pressure, Steering and Lubrication System	8
	High Pressure System Description and Operation	8
	Hitch-Mechanical Draft Control (MDC)	9
	Principles of Draft Control	9
	Principles of Position Control	10
	Principles of Float	11
	Principles of Draft and Position Control Combined	11
	Fast Raise/Lower Control	12
	Rear Auxiliary Control Valves	13
	Adding Rear Control Valves	13
	Remote Valves with Automatic Release	13
	Remote Valves with Float Setting	13
	Rear Remote Valve Control Levers	13
	Quick Release Couplers	13
	Rear Remote Valve Arrangement	14
	Models With Closed-Center Bosch Valves	14
	Regulating Oil Flow	15
	Joystick Control for Mid-Mount Remote Valves	15
	Mid-Mount Remote Control Valves	16
	Mid-Mount Valve(s) Plumbing	16
	Mid-Mount Auxiliary Control Valve Oil Flow Self-Centering (Double-Acting Valve)	17
	Self-Centering (Single-Acting Valve)	18
	Bosch Rear Remote Valve Neutral Operation With Detent (Non-Adjustable), Float, and Flow Control	19
35 104 30	High-Pressure (Lift) Pump Oil Seal Replacement	20
35 114 30	Lift Pressure Relief Valve	21

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87054730

Chapter 2 - Hitch-Mechanical Draft Control (MDC)

CONTENTS

Section	Description	Page
	Special Tools	2
	Specifications	3
	Torque Valves	6
	Sectional Views	8
	Troubleshooting	10
	Hydraulic Power Lift (HPL) Control Valve Oil Flow	12
	Lower Phase	12
	Neutral Phase	14
	Lift Phase	16
	Overhaul	18
35 108 16	Fast Raise/Lower Control	18
	Disassembly	18
	Assembly	18
35 110 08	Linkage	19
	Position Control Rod Adjustments	19
	Draft Control Rod Adjustments	19
	Fast Raise/Lower Control Device Adjustment	20
35 110 17	Rear Lift External Controls	22
	Disassembly	22
	Assembly	22
35 110 30	Hitch-Mechanical Draft Control (MDC)	23
	Removal	23
	Installation	29
	Disassembly	30
	Assembly	32
	Adjustments	35
35 114 10	Lift Control Valve	41
	Removal	41
	Installation	42
	Disassembly	43
	Assembly	47