
JX1075N - JX1095N REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	7
SECTION 21 - TRANSMISSIONS	9
SECTION 23 - MFD TRANSFER BOX AND AUTO MFD	10
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	12
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	14
SECTION 31 - MECHANICAL POWER TAKE-OFF	15
SECTION 33 - BRAKES	16
SECTION 35 - HYDRAULIC SYSTEM	17
SECTION 41 - STEERING	19
SECTION 44 - FRONT AXLE - 2WD	20
SECTION 50 - CAB CLIMATE CONTROL	21
SECTION 55 - ELECTRICAL SYSTEM	23
SECTION 90 - CAB, PLATFORM, AND BODYWORK	29

The following pages are the collation of the contents pages from each section and chapter of the JX1075N - JX1095N Tractor Repair manual. Complete Repair part # 87352289.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the JX1075N - JX1095N Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87352290

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	3
	Engine Type	3
	Timing System	4
	Valve Timing Gears	4
	Crankcase and Cylinder Block	5
	Crankshaft and Bearings	6
	Connecting Rod	7
	Piston	8
	Tappet	8
	Rocker Arm and Valve	9
	Rotating Counterweight Dynamic Balancer	9
	Cylinder Head	10

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Tightening Torques	11
	Special Tools	12
	Description and Operation	14
	Sectional Views	14
	Troubleshooting	16
	Overhaul	20
	Engine	20
10 001 10	Removal	20
	Installation	26
10 001 30	Compression Test	27
10 001 54	Disassembly	28
	Assembly	44
	Crank, Main Bearings and Thrust Rings	44
	Rear Cover with Seal and Engine Flywheel	46
	Synchronizing the Timing Gears	47
	Bosch Injection Pump	48
	Cylinder Head	48
	Valve and Rocker Arm	49
	Fuel Injectors	50
	Cylinder Block	51
	Inspection	51
	Crankshaft and Main Bearings	53
	Crankshaft Inspection	53
	Main Bearing Inspection	55
	Main Bearing Cap Bolt Inspection	55
10 102 70	Crankshaft Front Oil Seal	56
	Removal	56
	Installation	57
	Engine Flywheel	58
	Refacing	58
	Flywheel Bolts	58
	Inspection	58

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Connecting Rods	59
	Inspection	59
	Pistons with Rings, Pins, Connecting Rods, Big End Caps and Bearings	60
	Inspection	60
	Assembly	61
	Installation	62
	Valves, Tappets and Camshaft	64
	Valves, Grinding	64
	Dimensions (mm) of Valves and Valve Guides	64
	Valve Timing Check	65
	Tappets Inspection	65
	Camshaft Inspection	66
	Cylinder Head	67
	Inspection	67
	Valve Seats, Grinding	68
10 101 53	Valve Guides, Replacement	69
	Rotating Counterweight Dynamic Balancer	72
	Assembly	73
	Installation	73
10 254 44	Exhaust Pipe	74
	Removal	74
	Installation	74

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 2 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Description and Operation	4
	Sectional Views	4
	Overhaul	6
	Thermostat	6
	Flushing the System (Models without Cabs)	6
	Flushing the System (Models with Cabs)	7
	Coolant Thermometer	8
	Coolant Pump Drive Belt	8
	Adjustment	8
10 402 11	Coolant Pump	9
	Removal	9
	Installation	10
10 402 28	Disassembly	10
	Assembly	11
10 402 30	Thermostat Valve	12
	Removal	12
	Installation	12
10 406 10	Radiator	13
	Removal	13
	Installation	14

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 3 - Lubrication System

CONTENTS

Section	Description	Page
	Specifications	2
	Description and Operation	3
	Overhaul	4
	Oil Pump	4
	Removal	4
	Installation	4

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 4 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Description and Operation	6
	Fuel Injection (Bosch) Pump	6
	Turbocharged Models	6
	Cold Start Compensation (All Models)	8
	Thermostatic Switch	8
	Mechanical Cold-start Accelerator (KSB)	8
	Overhaul	9
10 216 10	Fuel Tank	9
	Removal	9
	Installation	10
10 101 60	Injector Sleeves	11
	Inspection	11
	Removal	11
	Installation	11

SECTION 10 - ENGINE

BOOK 1 - 87352290

Chapter 4 - Fuel System (Continued)

CONTENTS

Section	Description	Page
10 218 30	Injectors	13
	Removal	13
	Installation	13
10 246 14	Bosch Fuel Injection Pump	14
	Removal	14
	Installation	17
	Checking the Fuel Injection Pump Timing with the Pump Installed on the Tractor	18
	Lock-time the Fuel Injection Pump with Pump Removed from the Tractor	23
	Fuel Circuit Air Bleeding	28

SECTION 18 - CLUTCH

BOOK 1 - 87352290

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	LUK 11"/11" Clutch	2
	LUK 11" Clutch	2
	Tightening Torques	3
	Special Tools	3
	Description and Operation	4
	Sectional Views	4
	Troubleshooting	6
	Overhaul	7
18 110 10	Clutch	7
	Removal	7
	Installation	10

SECTION 18 - CLUTCH

BOOK 1 - 87352290

Chapter 1 - Clutch (Continued)

CONTENTS

Section	Description	Page
18 110 30	Dual Disk Clutch 11"/11"	11
	Disassembly	11
	Assembly	14
18 110 30	Single Disk Clutch 11" (for Power Shuttle models not available in North America) ..	15
	Disassembly	15
	Assembly	15
	Checks, Measurements and Repairs	16
	Dual Disk Clutch	16
	Adjustment of 11"/11" Dual Clutch Release	17
	Adjustment of 11" Single Plate Clutch Release Levers	18
18 100 40	Transmission Clutch Pedal Adjustment	19
	Mechanical PTO Clutch Control Adjustments	20

SECTION 18 - CLUTCH

BOOK 1 - 87352290

Chapter 2 - Servo Assist PTO Control

CONTENTS

Section	Description	Page
	Description of Operation	2
	Sectional Views	2
	Engaging the PTO Control Clutch	3
	Disengaging the PTO Control Clutch	4
	Checks, Measurement and Repairs	5
	Adjusting the PTO Clutch Servo Control	5
	Hydraulic PTO Servo Assist Cable Adjustment	6
	Adjusting the PTO Switch	7

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87352291

Chapter 1 - 16 x 16 Transmission with Synchronized Mechanical Shuttle
--

CONTENTS

Section	Description	Page
	Specifications	2
	Reverser	2
	Transmission and Range Gear	2
	Tightening Torques	3
	Special Tools	5
	Sectional Views	9
	Description and Operation	12
	Troubleshooting	13
	Gearbox and Reverser	13
	Overhaul	14
21 118 10 -	Rear Transmission-Gearbox Casing	14
21 118 12	Removal	14
	Installation	18
21 118 85	Disassembly	20
	Assembly	26
21 130 10	Gearbox Control Lever	30
	Removal	30
	Installation	30
21 130 11	Range Gear Control Lever	31
	Removal	31
	Installation	31
21 130 52	Shuttle Control Lever	32
	Removal	32
	Installation	32

SECTION 23 - MFD TRANSFER BOX AND AUTO MFD

BOOK 2 - 87352291

Chapter 1 - MFD Transfer Box

CONTENTS

Section	Description	Page
	Specifications	3
	MFD Electrohydraulic Engagement	3
	Drive Shaft Data	3
	Tightening Torques	4
	Special Tools	5
	Description of Operation	7
	Sectional Views	7
	Troubleshooting	11
	Overhaul	12
23 101 26	Drive Shafts and Guard	12
	Disassembly (Mod. JX1075N, JX1095N)	12
	Assembly	12
23 101 40 -	Drive Gear Housing Assembly	13
23 202 50	Removal	13
	Installation	14
23 101 42	Drive Gear Housing Removed	15
	Disassembly	15
	Assembly	16
23 202 52	Drive Gear Housing Removed	17
	Removal	17
	Installation	18
	Calibrations	19
	HH Menu Access	19
	H3 - System Configuration	20
	H4 - Software Revision Level	22
	H5 - Control Switch Diagnostics	22
	H8 - Deleting Data from the Non-Volatile Memory (NVM) (EEPROM)	23
	H9 - Voltmeter Functions	24
	HD - MFD Engagement Position	25
	HF - Faults Stored In the Non-Volatile Storage of the ECU	25
	First Start-up	27

SECTION 23 - MFD TRANSFER BOX AND AUTO MFD

BOOK 2 - 87352291

Chapter 1 - MFD Transfer Box (Continued)

CONTENTS

Section	Description	Page
	Diagnostics	28
	ECU Location	28
	Fault Codes	29
	Automatic MFD Fault Codes Indication	29
	Fault Code Decoding	29
	Wiring Diagram	67
	PTO and MFD Electronic Control Unit Input/Output	67

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87352291

Chapter 1 - Front Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	3
	Tightening Torques	5
	Special Tools	8
	Description and Operation	14
	Sectional Views	14
	Troubleshooting	20
	Overhaul	21
25 100 30	Front Axle, Assembly	21
	Removal	21
	Installation	25
25 100 19	Front Axle Pivot Bushings	27
	Replacement	27
41 216 18	Front Axle Steering Cylinder	28
	Disassembly	28
	Assembly	29
25 100 34	Wheel Hubs and Steering Knuckle	30
	Removal	30
	Installation	31
25 108 30	Front Epicyclic Final Drive	32
	Disassembly	32
	Assembly	34
25 102 15	Front Axle Differential Housing (For Models Without Brakes)	36
	Removal	36
	Installation	37
25 102 20 and 25 102 24	Hydraulically Controlled Differential Lock With Pinion (For Models Without Brakes)	39
	Disassembly	39
	Assembly	41
25 104 34	Front Axle Mechanical Differential Lock (Models Without Brakes)	43
	Disassembly (Pinion Removed)	43
	Assembly	44
21 108 85	Front Axle Steering Sensor	45
	Replacement	45

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87352291

Chapter 1 - Front Axle Mechanical Transmission (Continued)

CONTENTS		
Section	Description	Page
25 102 15	Pinion With Differential Front Axle (Models With Brakes)	46
	Removal	46
	Installation	49
25 102 20 and 25 102 24	Pinion With Mechanically Controlled Differential Lock (Models With Brakes)	51
	Overhaul	51
	Assembly	53
	Front Axle Pinion	54
	Disassembly	54
	Assembly	54
25 104 34	Mechanical Differential Lock (Electro-hydraulically Controlled)	55
	Disassembly (Pinion Removed)	55
	Assembly	56
	Adjustments	57
	Pinion (For Models Without Brakes)	57
44 511 80	Leading Drive Wheels Toe-in Check	61
	Front Axle Steering Sensor	62
	Pinion (Models With Brakes)	63

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 3 - 87352292

Chapter 1 - Rear Axle Mechanical Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Pinion and Differential	2
	Final Drive	3
	Tightening Torques	4
	Special Tools	7
	Description and Operation	11
	Sectional Views	11
	Troubleshooting	14
	Pinion and Differential	14
	Final Drive	14
	Hydraulically Controlled Differential Lock	15
	Overhaul	16
27 106 16	Rear Transmission Gearbox	16
	Disassembly	16
	Assembly	19
27 120 10 -	RH or LH Lateral Final Drive Housing Assembly	22
27 120 20	Removal	22
	Installation	23
27 120 34	Drive Wheel Shaft	24
	Disassembly	24
	Assembly	25
27 120 32	Epicyclic Final Drive	26
	Removal	26
	Installation	26
	Adjustments	27
27 110 10	Adjusting the Position of Differential Lock Engagement Sleeve	27
	Adjusting the Pinion	28

SECTION 31 - MECHANICAL POWER TAKE-OFF

BOOK 3 - 87352292

Chapter 1 - Mechanical Power Take-off

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Torque Settings	4
	Sectional View	5
	Description and Operation	6
	Troubleshooting	6
	Overhaul	7
31 112 20	Mechanical PTO	7
	Removal	7
	Installation	9

Thank you for choosing
CasetractorManuals

Please click the following link to
download and purchase

